































Machine	Explode	Code	Description
Buffalo 700 Series Electric Range Cooker	1		Chimney Casting
Buffalo 700 Series Electric Range Cooker	2	AU974	Ø225 Hot Plate (2.6 kW) 230V
Buffalo 700 Series Electric Range Cooker	3	AU975	Orange Indication Light
Buffalo 700 Series Electric Range Cooker	4	AU976	Green Indication Light
Buffalo 700 Series Electric Range Cooker	5	AU977	50-300°C Thermostat
Buffalo 700 Series Electric Range Cooker	6	AU978	Commutator Switch
Buffalo 700 Series Electric Range Cooker	7	AU979	0-1 Switch Three Phase
Buffalo 700 Series Electric Range Cooker	8		Oven Right Door
Buffalo 700 Series Electric Range Cooker	9		Cable Record PG-21
Buffalo 700 Series Electric Range Cooker	10		Oven Base Plate Back
Buffalo 700 Series Electric Range Cooker	11		Terminal Gray
Buffalo 700 Series Electric Range Cooker	11		Terminal Blue
Buffalo 700 Series Electric Range Cooker	11		Terminal Yellow-Green
Buffalo 700 Series Electric Range Cooker	11		Terminal Block Stopper
Buffalo 700 Series Electric Range Cooker	12		Oven Base Plate Front
Buffalo 700 Series Electric Range Cooker	13	AU980	Oven Resistance (1.5 kW)
Buffalo 700 Series Electric Range Cooker	14	AU981	350° Limit Thermostat
Buffalo 700 Series Electric Range Cooker	15		Electrical Installation Sheet
Buffalo 700 Series Electric Range Cooker	16		Right Side Panel
Buffalo 700 Series Electric Range Cooker	17		Grounding Terminal
Buffalo 700 Series Electric Range Cooker	18	AU967	Wheel Without Brake
Buffalo 700 Series Electric Range Cooker	19		Wheel With Brake
Buffalo 700 Series Electric Range Cooker	20		Right-Left Bottom Hinge
Buffalo 700 Series Electric Range Cooker	21		Resistance Fixing Sheet
Buffalo 700 Series Electric Range Cooker	22		Oven Door Gasket
Buffalo 700 Series Electric Range Cooker	23		Right-Left Upper Hinge
Buffalo 700 Series Electric Range Cooker	24		Ø36 Neodium Magnet (Ø36x5mm)
Buffalo 700 Series Electric Range Cooker	25		Left Side Panel
Buffalo 700 Series Electric Range Cooker	26		Back Panel
Buffalo 700 Series Electric Range Cooker	27		Oven Right-Left Shelf
Buffalo 700 Series Electric Range Cooker	28		Oven Left Door
Buffalo 700 Series Electric Range Cooker	29	AU971	Wire Shelf
Buffalo 700 Series Electric Range Cooker	30		Front Panel
Buffalo 700 Series Electric Range Cooker	31	AU982	0-6 Stage Switch
Buffalo 700 Series Electric Range Cooker	32		Knob Base Top Left Front
Buffalo 700 Series Electric Range Cooker	32		Knob Base Top Left Back
Buffalo 700 Series Electric Range Cooker	32		Knob Base Middle Front
Buffalo 700 Series Electric Range Cooker	32		Knob Base Middle Back
Buffalo 700 Series Electric Range Cooker	32		Knob Base Top Right Front
Buffalo 700 Series Electric Range Cooker	32		Knob Base Top Right Back
Buffalo 700 Series Electric Range Cooker	32		Knob Base Oven Thermostat
Buffalo 700 Series Electric Range Cooker	32		Knob Base Oven On/Off

Machine	Explode	Code	Description
Buffalo 700 Series Electric Range Cooker	33	AU973	∅6 Knob
Buffalo 700 Series Electric Range Cooker	34		Top Table
Buffalo 700 Series Electric Range Cooker	35		Hot Plate Heater Fixing Part

Circuit Diagram

