

## **USE AND MAINTENANCE INSTRUCTIONS: POLISHED STEEL PRODUCTS**

### Characteristics

The material used for the manufacture of this product is cold laminated sheet steel.  
Temporary anti-corrosion treatment which must be removed before using for the first time.  
Plastic epoxy handles and grips; durability depends on the use made of the product (on gas or wood-burning hobs, cleaning with abrasive products, etc.).  
The steel rivets require the same treatment as the receptacle.

#### - BEFORE USING FOR THE FIRST TIME:

Boil water in the receptacle.

Wash with water and detergent. Dry immediately. Never leave to air-dry.

The product is now ready to use; smear the interior with a light layer of oil to prepare it to better withstand the heat when cooking.

If you are not going to use the product straight away, lightly oil the interior and keep it wrapped in paper inside a plastic bag. Keep in a safe, dry place.

#### - PRECAUTIONS DURING USE:

This type of product has been devised for use on gas or wood-burning hobs.

Never put the receptacle on the heat when empty.

Avoid overheating the recipient. Monitor the heat intensity at all times.

If using in the oven, do not exceed a temperature of 250° C (° F) nor a duration of 10 minutes. For oven use, we recommend our LA IDEAL enamelled products.

Never use in a microwave oven.

Wooden and stainless steel implements may be used. Plastic implements are not recommended, as when using this kind of product, higher temperatures than usual tend to be reached.

When in use, every part of the product will become hot. Please take great care and never leave the receptacle on the hob without responsible adult supervision. Keep well out of reach of children.

#### - MAINTENANCE

This type of product does not have a non-stick surface so that it is quite possible for food remains to become stuck. The easiest way to remove these is to fill the receptacle with soapy water and leave for at least an hour. This will soften the food remains. Then wash thoroughly with detergent and hot water.

When necessary, use hard scourers and scouring powder for cleaning the product.

When clean, lightly oil the receptacle both inside and out and keep it wrapped in paper inside a plastic bag in a dry, safe place.

#### - GUARANTEE

Two years from date of purchase against any manufacturing defect.

This guarantee does not cover damages caused by the end user or distributor, breakage resulting from transportation of the product to its final point of sale, deterioration in the appearance of the product through normal use (for example, loss of colour on handles or grips or rusting through lack of proper care or maintenance or caused by extreme environmental conditions).