

# HOST

**Wine fridge**  
Instruction manual

**Model:**  
HOST1220WR



**Read this instruction  
manual carefully  
before use**

---

## Safety Instructions

---

- Position on a flat, stable surface.
- A service agent/qualified technician should carry out installation and any repairs if required. Do not remove any components or service panels on this product.
- Consult Local and National Standards to comply with the following:
  - Health and Safety at Work Legislation
  - BS EN Codes of Practice
  - Fire Precautions
  - IEE Wiring Regulations
  - Building Regulations
- DO NOT immerse in water, or use steam/jet washers to clean the unit.
- DO NOT cover the appliance when it is operating.
- DO NOT store food in the wine fridge.
- Always carry, store and handle the appliance in a vertical position.
- Never tilt the appliance more than 45° from the vertical.
- This appliance is intended to be used in household and similar applications.
- Keep all packaging away from children. Dispose of the packaging in accordance with the regulations of local authorities.
- If the power cord is damaged, it must be replaced by a recommended qualified technician in order to avoid a hazard.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.

- HOST recommend that this appliance should be periodically tested (at least annually) by a Competent Person. Testing should include, but not be limited to: Visual Inspection, Polarity Test, Earth Continuity, Insulation Continuity and Functional Testing.
- HOST recommend that this product is connected to a circuit protected by an appropriate RCD (Residual Current Device).
- This appliance is intended to be used exclusively for the storage of wine.
- Children aged from 3 to 8 years are allowed to load and unload refrigerating appliances.

**Warning: Risk of Fire / flammable materials**



- The refrigerant gas contained in this appliance is isobutene (R600a), which is low-polluting but flammable.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.

**Warning: Keep all ventilation openings clear of obstruction. Unit should not be boxed in without adequate ventilation.**

- **Warning:** Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- **Warning:** Do not damage the refrigerant circuit.
- **Warning:** Do not use electrical appliances inside the food storage compartments of the appliance.

# Installation

**Note:**

**Not for use in vans or trailers, food trucks or similar vehicles.**

**If the unit has not been stored or moved in an upright position, let it stand upright for approximately 12 hours before operation. If in doubt allow to stand.**

1. Place the fridge on a floor that is able to support it once fully loaded.
2. Remove the appliance from the packaging and the protective film from all surfaces.
3. Avoid positioning the fridge in direct sunlight or damp areas.
4. To optimize performance and longevity, ensure a minimum clearance of 2.5cm is maintained between the unit and walls and other objects, with a minimum 20cm clearance on the top. **NEVER LOCATE NEXT TO A HEAT SOURCE.**
5. If necessary, adjust the screw legs of the fridge to make it level.

**WARNING: When positioning the appliance, ensure the supply cord is not trapped or damaged.**  
**WARNING: Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.**

6. **Installing the Door handle:** Remove the door gasket covering the handle location - there are two designated holes for the handle installation. Attach the handle and fix with the screws provided. Replace the door gasket into place.

# Operation

**Note: the fridge should be placed in an area where the ambient temperature is between 16-38°C.**

- When using the fridge for the first time, or re-starting it after a long period of time, there may be a few degrees variance between the selected temperature and what is shown on the LED display. Once the fridge has been switched on for a few hours, this should rectify itself.
- If the unit is unplugged, has lost power or been turned off, wait 30 minutes to 2 hours before restarting the appliance.

## Control panel

When light on, unit is cooling



Power		Press to turn the system on/off
Light		Press to turn the inner light on/off
Up		• Press to increase / decrease the temperature (Temperature range: 5-20°C / 41-68°F)
Down		• Press and hold both buttons for 5 seconds to switch between Fahrenheit (°F) and Celsius (°C)

- When storing mainly red wine, the recommended temperature is 14-18°C.
- When storing mainly white wine, the recommended temperature is 8-12°C.
- When storing mainly sparkling wine, the recommended temperature is 7-9°C.

**Note for the dual-zone wine fridges:**

- **The temperature for the lower zone must ALWAYS be the same or higher than the upper zone.**
- **The lower zone is featured with heating function, which will turn on automatically when the set temperature is higher than the room temperature or the actual lower zone temperature.**

## Storage


140 wine bottles can be placed in the upper and lower shelves - 20 bottles on each. A maximum of 32 bottles can be stored on the bottom when the bottom shelf is removed.

**Note:**

- **Bottle capacities are approximate maximums when storing traditional Bordeaux 750ml bottles and include bulk storage.**
- **To prevent damage to the door gasket, ensure the door is fully open when pulling shelves out of the rail compartment.**

### To avoid contamination of drink, please respect the following instructions:

- Opening the door for long periods can cause a significant increase of the temperature in the compartments of the appliance.
- If the refrigerating appliance is left empty for long periods, switch it off. Then defrost and clean it thoroughly. Let it dry well and leave the door open to prevent mould developing within the appliance.
- Clean regularly surfaces that can come in contact with drink and accessible drainage systems.
- Only load the appliance when it has reached the correct operating temperature.

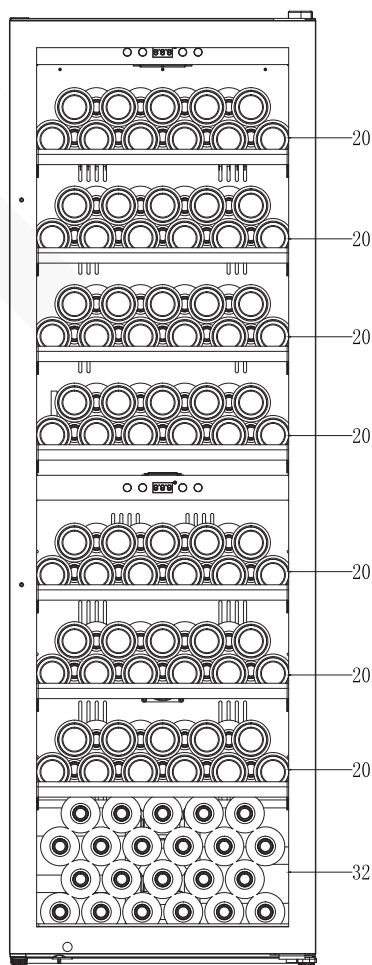

---

## Cleaning, Care & Maintenance

---

- **Always switch off and disconnect the power supply before cleaning.**
- Remove all bottles from the appliance.
- Warm, soapy water is recommended for cleaning. Cleaning agents may leave harmful residues.
- Periodically clean the bottom of the wine fridge compartment to remove any build-up of condensation.

**Condensation will form in refrigeration with frequent opening of the doors and on hot humid days, please ensure condensation is allowed to drain properly or is wiped dry.**

### Defrosting

The unit has an automatic defrost cycle to reduce the build-up of ice, but occasionally a manual defrost may be necessary. To manually defrost the appliance remove contents and switch off unit. Allow ice to melt and dry cabinet before switching back on.

---

## Troubleshooting

---

A qualified technician must carry out repairs if required.

Fault	Probable Cause	Solution
The appliance is not working	The unit is not switched on	Check the unit is plugged in correctly and switched on
	Plug or lead is damaged	Replace plug or lead
	Fuse in the plug has blown	Replace the fuse
	Mains power supply fault	Check mains power supply
Appliance is noisy or works intermittently	Appliance is not level	Adjust the feet to level the appliance
Wine fridge cabinet is not cold enough	Temperature set incorrectly	Check temperature and reset if necessary
	External environment may require colder temperature	Check temperature and reset if necessary
	The door is opened too often	Only open when necessary
	Door seal is worn	Consult a qualified technician
Light is not working	Light key is not pressed	Press the light key
	Bulb has blown	Consult a qualified technician
Door will not close properly	Appliance is not level	Adjust the feet to level the appliance
	Shelves are out of position	Check all shelves are properly inserted
	Door seal is dirty	Wipe clean with a damp cloth
Condensation on outer surfaces (glass)	Condensation may occur when the humidity is high and water particles in the air contact with cold surfaces. This is normal, just wipe away with a dry cloth	

---

## Service

---

Should your appliance have a fault, please visit the Service section of the HOST website.

<https://www.host-appliances.com/repairs>

## Technical Specifications

Model	Voltage	Power	Current	Bottle Capacity	Refrigerant	Temp. Range	Dimensions (H x W x D) (mm)	Weight (kg)
HOST1220WR	220-240V~ 50Hz	150W	1.5A	172	R600a 45g	5-20°C	1850 x 595 x 695	98

Due to our continuous improvement process, the product specifications are subject to change without notice.

<b>Impact of temperature settings on food waste:</b>	This appliance shall be operated in its designated operating range to reduce food waste from spoilage
<b>Ordering spares parts:</b>	To order spare parts, please visit the link below: <a href="http://www.host-appliances.com">www.host-appliances.com</a> Then type the relative item code and Spares
<b>Minimum period of spares parts to be available:</b>	Door handles, door hinges, knobs, dials and buttons, door gaskets, peripheral trays, baskets and racks for storage, as appropriate to the appliance, will be made available to both end users and professional users for a minimum of eight years after the last unit of the model is placed on the market. A broader selection of parts will also be made available to Professional users for this period
<b>To find the model information on the product:</b>	The location of the model No. is on the plate on the interior right-hand wall (and on the rear) of the appliance

---

## Electrical Wiring

---

The appliance is supplied with a 3 pin BS1363 plug and lead.

The plug is to be connected to a suitable mains socket.

The appliance is wired as follows:

- Live wire (coloured brown) to terminal marked L
- Neutral wire (coloured blue) to terminal marked N
- Earth wire (coloured green/yellow) to terminal marked E

This appliance must be earthed.



If in doubt consult a qualified electrician.

Electrical isolation points must be kept clear of any obstructions. In the event of any emergency disconnection being required they must be readily accessible.

---

## Disposal

---

EU regulations require refrigeration product to be disposed of by specialist companies who remove or recycle all gasses, metal and plastic components.

Consult your local waste collection authority regarding disposal of your appliance. Local authorities are not obliged to dispose of commercial refrigeration equipment but may be able to offer advice on how to dispose of the equipment locally.

---

## Compliance

---

The WEEE logo on this product or its documentation indicates that the product must not be disposed of as household waste. To help prevent possible harm to human health and/or the environment, the product must be disposed of in an approved and environmentally safe recycling process. For further information on how to dispose of this product correctly, contact the product supplier, or the local authority responsible for waste disposal in your area.



HOST parts have undergone strict product testing in order to comply with regulatory standards and specifications set by international, independent, and federal authorities.



All rights reserved. No part of these instructions may be produced or transmitted in any form or by any means, electronic, mechanical, photocopying, recording or otherwise, without the prior written permission of HOST. Every effort is made to ensure all details are correct at the time of going to press, however, HOST reserve the right to change specifications without notice.

We {Host} of {Host House, Newhouse Farm Industrial Estate, Mathern, Chepstow, NP16 6UP} hereby declare that the equipment is in conformity with the requirements of the following Regulations:

- **Low Voltage Directive (LVD) - 2014/35/EU**  
Electrical Equipment (Safety) Regulations 2016
- **Electro-Magnetic Compatibility (EMC) Directive 2014/30/EU - recast of 2004/108/EC**  
Electromagnetic Compatibility Regulations 2016 (S.I. 2016/1091)
- **Restriction of Hazardous Substances Directive (RoHS) 2015/863 amending Annex II to Directive 2011/65/EU**  
The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012 (S.I. 2012/3032)

We hereby declare that:

Equipment Model number:

HOST1220WR

Wine Fridge 2 Zone in Black - 172 Bottle

is in conformity with the applicable requirements of the following documents:

Ref. No.	Edition/date
EN 60335-1	2012 +A11:2014 +A13:2017 +A1:2019 +A2:2019 +A14:2019 +A15:2021
EN IEC 60335-2-24	2022 +A11:2022
EN 62233	2008
EN IEC 55014-1	2021
EN IEC 55014-2	2021
EN IEC 61000-3-2	2019 +A1:2021
EN 61000-3-3	2013 +A1:2019 +A2:2021
EN IEC 62311	2020
EN 300 328	V2.2.2
EN 301 489-1	V2.2.3
EN 301 489-17	V3.2.4

I hereby declare that the equipment named above has been designed to comply with the relevant sections of the above referenced specifications and is in accordance with the requirements of the Regulations:

Signed by:

Signed by:  
  
AB6DB7656FFB441...

Full Name  
Title:

Ashley Hooper  
Group Head of Product  
Quality & Compliance

Location:  
Date:

Bristol, United Kingdom  
16<sup>TH</sup> May 2025









[www.host-appliances.com](http://www.host-appliances.com)

HOST1220WR\_EN\_A5\_v1\_2025/07/23