













 



 



 


Machine	Explode	Code	Description
HOST Double Contact Grill	1		Apron
HOST Double Contact Grill	2		Thermostat
HOST Double Contact Grill	3		Oil Box
HOST Double Contact Grill	4		Bottom Heater Cover Plate
HOST Double Contact Grill	5		Lower Heater
HOST Double Contact Grill	6		Indicator Light
HOST Double Contact Grill	7		Switch
HOST Double Contact Grill	8		Black Rubber Feet (set 4)
HOST Double Contact Grill	9		Bottom Sealing Plate
HOST Double Contact Grill	10		Cotton Sealing Board
HOST Double Contact Grill	11		Terminal
HOST Double Contact Grill	12		Hoarding
HOST Double Contact Grill	13		Hi-Limit
HOST Double Contact Grill	14		Bottom Griddle (Ribbed) for HOST0541RR HOST0543RF
HOST Double Contact Grill	14		Bottom Griddle (Flat) for HOST0542FF
HOST Double Contact Grill	15		Top Griddle (Ribbed) for HOST0541RR
HOST Double Contact Grill	15		Top Griddle (Flat) for HOST0542FF HOST0543RF
HOST Double Contact Grill	16		Upper Heater
HOST Double Contact Grill	17		Plastic Handle
HOST Double Contact Grill	18		Upper Shaft
HOST Double Contact Grill	19		Spring
HOST Double Contact Grill	20		Top Cover
HOST Double Contact Grill	21		Protect Pipe