



Machine	Explode	Code	Description
HOST Electric Fryer Double - 3kW 5Ltr	1		Apron
HOST Electric Fryer Double - 3kW 5Ltr	2		Black Rubber Feet (set 4)
HOST Electric Fryer Double - 3kW 5Ltr	3		Foot Plate
HOST Electric Fryer Double - 3kW 5Ltr	4		Fretting Switch Roof
HOST Electric Fryer Double - 3kW 5Ltr	5		Dowel
HOST Electric Fryer Double - 3kW 5Ltr	6		Apron Back Plate
HOST Electric Fryer Double - 3kW 5Ltr	7		Apron Crossbeam
HOST Electric Fryer Double - 3kW 5Ltr	8		Electric Box Hoarding
HOST Electric Fryer Double - 3kW 5Ltr	9		Side Panel for Electric Box
HOST Electric Fryer Double - 3kW 5Ltr	10		Side Panel
HOST Electric Fryer Double - 3kW 5Ltr	11		Electric Box Sealing Plate
HOST Electric Fryer Double - 3kW 5Ltr	12		Electric Heating Pipe
HOST Electric Fryer Double - 3kW 5Ltr	13		Travel Switch
HOST Electric Fryer Double - 3kW 5Ltr	14		Heater Protective Plate
HOST Electric Fryer Double - 3kW 5Ltr	15		Cover
HOST Electric Fryer Double - 3kW 5Ltr	16		Switch
HOST Electric Fryer Double - 3kW 5Ltr	17		Indicator Light
HOST Electric Fryer Double - 3kW 5Ltr	18		Knob
HOST Electric Fryer Double - 3kW 5Ltr	19		Handle
HOST Electric Fryer Double - 3kW 5Ltr	20		Rubber Sleeve
HOST Electric Fryer Double - 3kW 5Ltr	21		Blasting Net Support Piece
HOST Electric Fryer Double - 3kW 5Ltr	22		1/2 GN Pan
HOST Electric Fryer Double - 3kW 5Ltr	23		Temperature Limiter
HOST Electric Fryer Double - 3kW 5Ltr	24		EGO Thermostat
HOST Electric Fryer Double - 3kW 5Ltr	25		Basket