

# robot coupe<sup>®</sup>

**New**  
Register  
your product  
on line



**Kitchen Blender BL 3**




**Kitchen Blender BL 5**

TRANSLATION OF ORIGINAL INSTRUCTIONS

www.robot-coupe.com

@ Register your product on line

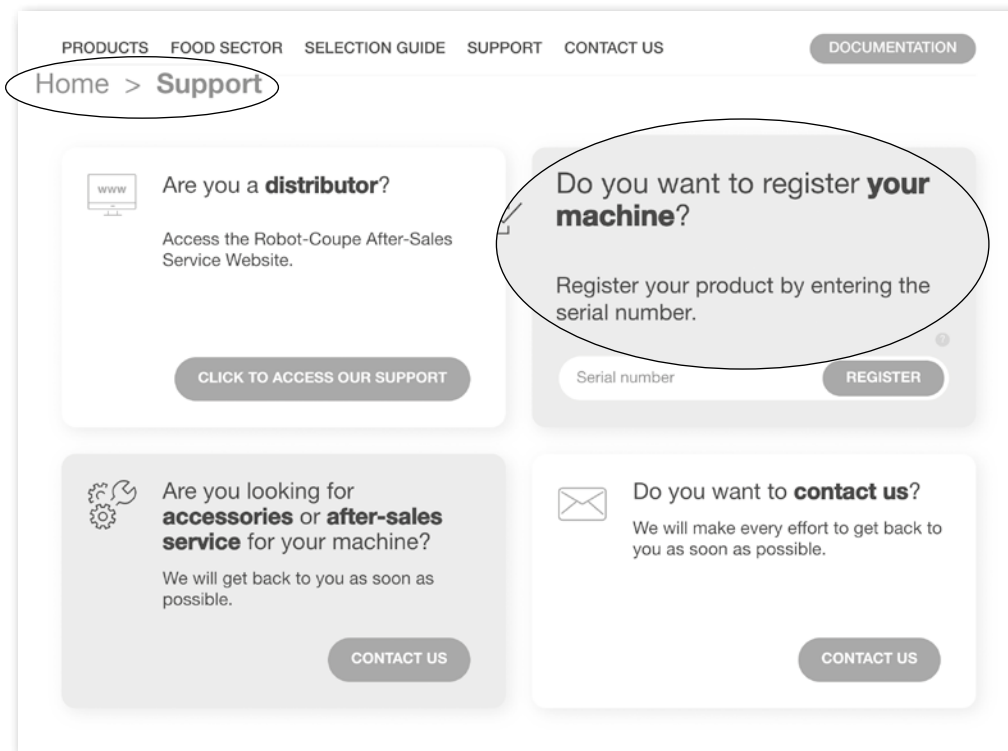

**robot**  **coupe**<sup>®</sup>



## OPERATING INSTRUCTIONS

We reserve the right to alter at any time without notice the technical specifications of this appliance.  
None of the information contained in this document is of a contractual nature. Modifications may be made at any time.  
© All rights reserved for all countries by: ROBOT-COUBE s.n.c.

## UKCA Declaration of Conformity

**Robot-Coupe® SNC** declares that all the machines subject of these original instructions, as well as their accessories and their packaging, comply with:


- the essential requirements of the following European directives and with the corresponding national regulations:
  - Supply of Machinery (Safety) **Regulations 2008 N °1597**,
  - Electrical Equipment (Safety) **Regulations 2016 N °1101**,
  - Electromagnetic Compatibility **Regulations 2016 N °1091**,
  - Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment **Regulations 2012 N °3032**,
  - The Waste Electrical and Electronic Equipment **Regulations 2013 N °3113**,
- The REACH Enforcement **Regulations 2008 N °2852**,
- The Materials and Articles in Contact with Food **Regulations 2012**,
- Regulation **(EC) No 2023/2006** "Good manufacturing practice for materials and articles intended to come into contact with food".
- The Plastic Materials and Articles in Contact with Food **Regulations 2008**,
- the provisions of the following harmonized European standards and the standards specifying the safety and hygiene requirements:
  - **EN ISO 12100** Safety of machinery – General principles for design,
  - **EN 60204-1** Safety of machinery – Electrical equipment of machines,
- **EN 60529** Degrees of protection provided by enclosures (IP Code):
  - Requirements according to EN 60204-1. Minimum IP34 for control system enclosures,
- and according to the category of the apparatus, with the provisions of the following harmonized European standards specifying the safety and hygiene requirements:
  - **EN 454**.....Planetary Mixers,
  - **EN 1678**.....Vegetable Cutting Machines (and Juice Extractors),
  - **EN 12852**.....Food Processors and Blenders,
  - **EN 12853**.....Hand-Held Blenders and Whisks (Power Mixers),
  - **EN 13208**.....Vegetable Peelers,
  - **EN 13621**.....Salad Dryers,
  - **EN 14655**.....Baguette Slicers.
- The whole with reference to the version in force on the date of this Declaration for all the above directives, regulations and standards, as well as all applicable (EU) regulations which modify, correct and/or rectify them.

"Revision R0"

Isleworth, on September 20<sup>th</sup>, 2022.

*Edmund Cotterell*

Edmund COTTERELL  
Managing Director

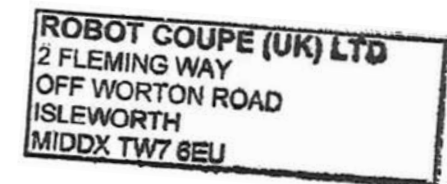

# SUMMARY

## ■ WARRANTY

## ■ IMPORTANT WARNING

## ■ YOU HAVE JUST ACQUIRED A BL 3 OR BL 5 KITCHEN BLENDER

## ■ SWITCHING ON THE MACHINE

- Advice on electrical connections
- Start-up
- Control panel

## ■ MOUNTING THE JUG ON THE MOTOR BASE

## ■ USES & EXAMPLES

## ■ REMOVING THE JUG FROM THE MOTOR BASE

## ■ CLEANING

- Motor base
- Bowl
- Blade assembly
- Lid, seal and cap

## ■ MAINTENANCE

- Regular maintenance
- Blade
- Lid seal

## ■ TECHNICAL SPECIFICATIONS

- Weight
- Dimensions
- Working height
- Noise level
- Electrical data

## ■ SAFETY

## ■ DIAGNOSIS

- List of codes displayed

## ■ STANDARDS

## ■ ELECTRICAL AND WIRING DIAGRAMS (page 13)

# ROBOT-COUCPE S.N.C., LIMITED WARRANTY

**Your new ROBOT-COUCPE S.N.C. appliance is warranted to the original buyer for a period of one year from the date of sale if you bought it from ROBOT-COUCPE S.N.C. If you bought your ROBOT-COUCPE S.N.C. product from a distributor your product is covered by your distributor's warranty (Please check with your distributor terms and conditions of the warranty).**

**The ROBOT-COUCPE S.N.C. limited warranty is against defects in material and/or workmanship.**

## **THE FOLLOWING ARE NOT COVERED BY THE ROBOT-COUCPE S.N.C. WARRANTY:**

**1** - Damage caused by abuse, misuse, dropping, or other similar damage caused by or resulting from failure to follow assembly, operating, cleaning, user maintenance or storage instructions.

**2** - Labour to sharpen and/ or replacements for blades which have become blunt, chipped or worn after a normal or excessive period of use.

**3** - Materials or labour to replace or repair scratched, stained, chipped, pitted, dented or discoloured surfaces, blades, knives, attachments or accessories.

**4** - Any alteration, addition or repair that has not been carried out by the company or an approved service agency.

**5** - Transportation of the appliance to or from an approved service agency.

**6** - Labour charges to install or test new attachments or accessories (i.e., bowls, discs, blades, attachments) which have been arbitrarily replaced.

**7** - The cost of changing direction-of-rotation of three-phase electric motors (installer is responsible).

**8** - SHIPPING DAMAGES. Visible and latent defects are the responsibility of the freight carrier. The consignee must inform the carrier and consignor immediately, or upon discovery in the case of latent defects.

**KEEP ALL ORIGINAL CONTAINERS AND PACKING MATERIALS FOR CARRIER INSPECTION.**

Neither ROBOT-COUCPE S.N.C. nor its affiliated companies or any of its distributors, directors, agents, employees, or insurers will be liable for indirect damage, losses, or expenses linked to the appliance or the inability to use it.

**The ROBOT-COUCPE S.N.C. warranty is given expressly and in lieu of all other warranties, expressed or implied, for merchantability and for fitness toward a particular purpose and constitutes the only warranty made by ROBOT-COUCPE S.N.C. France.**

# IMPORTANT WARNING



**WARNING:** In order to limit accidents such as electric shocks, personal injury or fire, and in order to limit material damage due to misuse of the appliance, please read these instructions carefully and follow them strictly. Reading the operating instructions will help you get to know your appliance and enable you to use the equipment correctly. Please read these instructions in their entirety and make sure that anyone else who may use the mixer also reads them beforehand. Our equipment is designed for professional use and must not be used by children under any circumstances.

## UNPACKING

- Carefully remove the equipment from the packaging and take out all the boxes or packets containing attachments or specific items.
- **WARNING** - some of the tools are very sharp e.g. blades, discs... etc.

## INSTALLATION

- We recommend you install your machine on a perfectly stable solid base.

## CONNECTION

- Always check that your mains supply corresponds to that indicated on the identification plate on the motor unit and that it can withstand the amperage.
- The machine must be earthed.

## HANDLING

- Always take care when handling the blades, as they are extremely sharp.

## ASSEMBLY PROCEDURES

- Follow the various assembly procedures carefully (see page 7) and make sure that all the attachments are correctly positioned

## USE

- Never try to override the locking and safety systems.
- Never insert an object into the container where the food is being processed.
- Never push the ingredients down with your hand.
- Do not overload the appliance.
- Never switch the appliance on when it is empty.

## CLEANING

- As a precaution, always unplug your appliance before cleaning it.
- Always clean the appliance and its attachments at the end of each cycle.
- Never immerse the motor base in water.
- For parts made from aluminum, use cleaning fluids intended for aluminum.

- For plastic parts, do not use detergents that are too alkaline (i.e. containing too much caustic soda or ammonia).
- Robot-Coupe can in no way be held responsible for the user's failure to follow the basic rules of cleaning and hygiene.

## MAINTENANCE

- Before opening the motor housing, it is absolutely vital to unplug the appliance.
- Check the seals and washers regularly and ensure that the safety devices are in good working order.
- It is particularly important to maintain and check the attachments since certain ingredients contain corrosive agents, e.g. citric acid.
- Never operate the appliance if the power cord or plug has been damaged or if the appliance fails to work properly or has been damaged in any way.
- Do not hesitate to contact your local Maintenance Service if something appears to be wrong.

## YOU HAVE JUST ACQUIRED A BL 3 OR BL 5 KITCHEN BLENDER

Your Kitchen Blender is equipped with the following depending on the model:

- **BL 3:** 3 L jug with a useful volume of 2.5 L.
- **BL 5:** 5 L jug with a useful volume of 3.5 L.

## SWITCHING ON THE MACHINE



### WARNING

THIS APPLIANCE MUST BE PLUGGED INTO AN  
EARTHED SOCKET (RISK OF ELECTROCUTION).

#### • ADVICE ON ELECTRICAL CONNECTIONS

Before plugging in, check that your power supply corresponds to that indicated on the machine's identification plate.

This model is adapted to:

220-240V / 50-60Hz / 1

The standardized plug must be calibrated to 16 amps.


#### • START-UP

When the machine is connected to the mains, a start-up code ranging from C40 to C47 appears briefly.

#### • CONTROL PANEL

**IMPORTANT : NEVER TRY TO OVERRIDE THE BLENDER'S SAFETY DEVICES.**

The Pulse and the On and Off buttons are used to operate the blender. They are the same on all ROBOT-COUPÉ appliances.

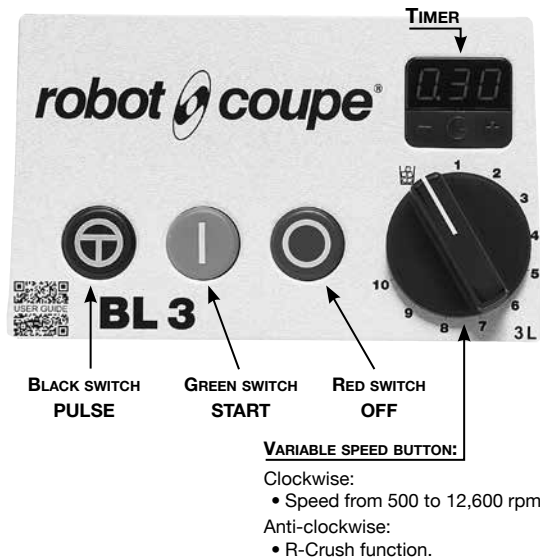

#### 1. Speed functions:

##### • Variable speed:

Variable speed from 500 to 12,600 rpm.

To change the speed, simply turn the variable speed button clockwise.

##### • R-Crush function:

**crushed ice / other ingredients**

Maximum ice-cube volume:

**BL 3: 2 L of ice-cubes - BL 5: 2,5 L of ice-cubes**

Turn the variable speed button anti-clockwise. The blade turns in the opposite direction at intermittent speed to crush ice-cubes or grind.

It is not necessary to stop the blender to use the R-Crush function or vice-versa.

The motor will stop momentarily as it reaches 1 and start again on speed 1.

##### • Pulse function:

Better control of preparations thanks to the precision High Pulse button. You can select the Pulse speed using the rotating button.

**The Pulse function** can be used whether the blender is turning or not.

#### 2. Timer:

##### • How to use the timer

The timer has three 7-segment LED displays, two timer adjustment buttons and a buzzer.

##### a ) Countdown

When the food processor is switched on, the timer usually displays 0.00 and can be started directly by the user. This is called Countdown Mode. The timer increases by one second at a time when the motor is operating. It stops increasing if the motor stops then resumes when the motor starts again. It continues to increase up to 9.59 minutes then the timer buzzes when zero is displayed. Then it starts increasing again. If no changes are made to the control panel, the motor stops automatically after 9 minutes.

##### b ) Timer

Before starting, the user can adjust the processing time to anywhere between 0.05 and 9.59 by pressing the + and - buttons. When the motor starts, the timer increases one second at a time. This is called Timer Mode. Countdown stops if the motor stops and resumes when the motor starts again. When the countdown gets to 0.00, the processor stops and a buzzer sounds. The time initially set is then displayed again.

##### c ) Starting the processor with the Pulse button:

If the blender is started using the Pulse button, the timer goes into Countdown Mode when the Pulse button is held down and returns to the previous timer display when the Pulse button is released.

##### d ) Reset


If the timer displays anything other than 0.00 when the motor is not operating, the user can reset the display to zero by pressing the + and - buttons at the same time or by pressing the "Off" button on the food processor for 2 seconds.

##### e) Turning off the timer:

If you do not want to use the timer, you can deactivate it by pressing the "On" and "Off" buttons at the same time for several seconds. Repeat the operation to reactivate the timer function.

## MOUNTING THE JUG ON THE MOTOR BASE


- 1) Before placing the jug on the motor base, check that the blade is correctly positioned with its seal and universal tool screw locked into place. However, if the screw is not locked into place, it will be secured when the jug is locked onto the motor base.
- 2) With the motor base facing you, place the jug on the motor base, with its handle slightly to the left.
- 3) Using the handle, turn the jug anti-clockwise until it is locked in place. The handle will be facing you. You will feel a slight resistance.
- 4) Pick up the lid, check that the seal is correctly positioned and that the cap is screwed on tightly.
- 5) Place the lid on the jug, aligning shape 1 with lug 2 on the edge of the jug.

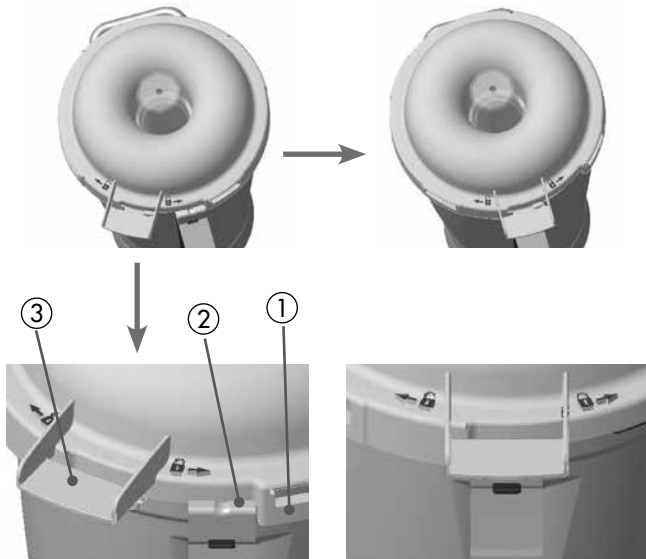

- 6) While holding the jug by the handle, using lever 3, turn the lid in the direction of the arrow (anti-clockwise) until it is locked in place (lid handle and jug handle aligned).

## USES & EXAMPLES

- The Kitchen Blender is equipped with safety systems to ensure the jug and lid are both present. If one of these two components is incorrectly positioned, the blender will not work.
- Fill the jug with the ingredients to be blended, without going above the **Max level** indicated inside the jug.

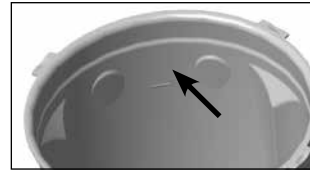

This can be done whether the jug is on the Kitchen Blender base or not. In general, add liquids before solids.

- Place the lid on the jug.
- **For very small quantities, the blade must be totally immersed.**
- Once the jug with its lid are correctly placed on the motor base, turn on the Kitchen Blender. Since the Kitchen Blender has a variable speed function, always start at low speed and end with the maximum speed for the preparation underway.
- If you want to add ingredients during blending, remove the cap and add.

### Hot liquid preparations



## WARNING

**Use the handles provided when handling the jug. Screw the cap on tightly.**

- Use the same procedure as for cold preparations..
- Since the lid is equipped with a pressure-release system when opened in order to protect the user from spattering, it may be necessary to press lightly on the back of the lid when opening in order to get past safety notch 4.




## REMOVING THE JUG FROM THE MOTOR BASE

It is recommend removing the lid when the jug is still attached to the motor base.

### Proceed as follows:

- 1) Before carrying out any operation, turn off the Kitchen Blender by pressing the red button on the front.
- 2) While holding the bowl by the handle, using lever 3, turn the lid in the direction of the arrow (anti-clockwise) until it is locked in place. (Shape 1 against lug 2 of the jug).
- 3) Raise the lid to remove. Place on a clean surface. Make sure you do not place it on a hot surface.
- 4) To remove the jug from the motor base, unlock using the handle to turn it clockwise, then raise.

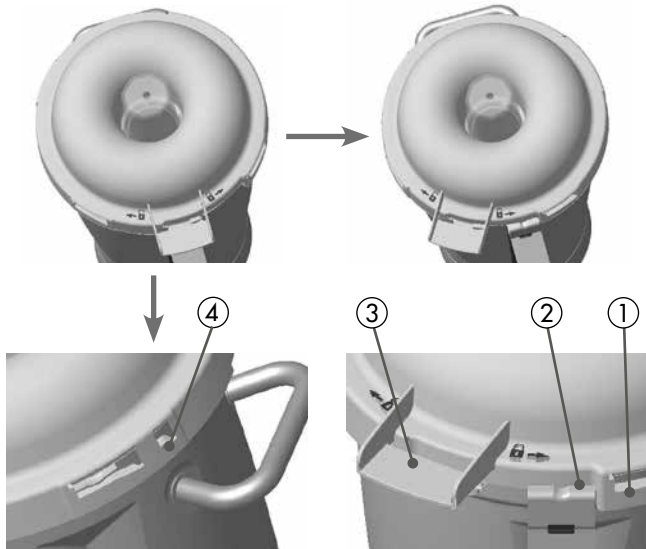

## CLEANING

After each use, the jug lid and seal must be washed together with the blade assembly.



## WARNING

As a precaution, always unplug your appliance before cleaning it (hazard of electrocution) and handle the blades with care (hazard of injury).

### • MOTOR BASE

Never immerse the motor base in water. Clean using a damp cloth or sponge.

### • BOWL

The jug can be pre-washed by filling it with warm water if possible (do not exceed the Max level indicated) while the jug is still on the motor base. Once the lid is securely closed, with the cap on, run on maximum speed for a few minutes

### Thorough cleaning:

- Remove the lid.
- Remove the blade from the jug.
- Clean by rubbing any particularly dirty areas if necessary then wash the jug with detergent or put it in the dishwasher.

### • BLADE ASSEMBLY

It is important to thoroughly clean the blade after each use.


Remove the blade from the jug. Whenever possible, clean the blade assembly with a brush and detergent. Rinse and dry the blade assembly. If necessary, sterilise the jug and blade assembly in a cold room.

### DISMOUNTING THE BLADE ASSEMBLY FOR CLEANING

- The blades are very sharp and must be handled with care. If necessary, use protective gloves or other adequate means to protect your hands.


### Dismounting the blade:

- Hold the jug in one hand and unscrew the blade screw in a clockwise direction using the wings provided for this purpose.
- After unscrewing, remove the blade assembly.
- It is important to hold the jug at a slight angle so that the blade assembly does not fall out of the jug when the screw has been loosened.

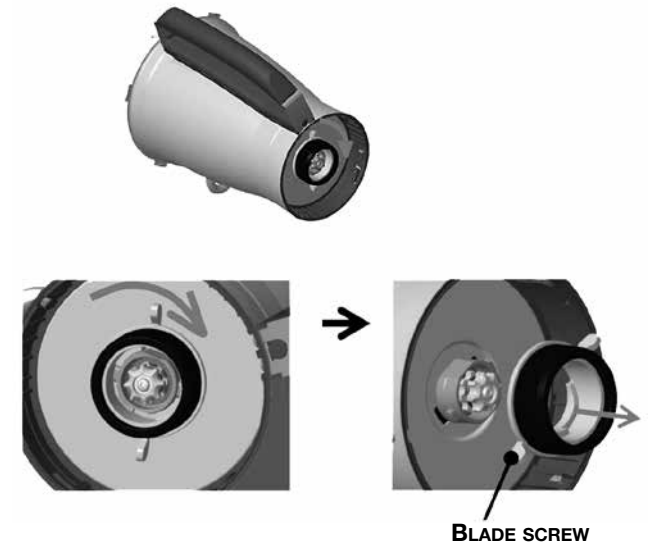

### Remounting the blade:

- To remount the blade assembly, proceed in reverse order.
- Check the seal for damage and replace if necessary. Make sure it is correctly positioned.
- Turn the blade screw in a clockwise direction and tighten until it is locked in place against the lug.

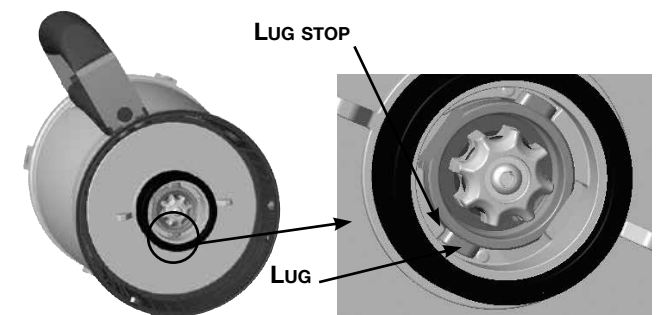





BLADE SCREW LOCKED IN PLACE AGAINST THE BLADE ASSEMBLY LUG.

## • LID, SEAL AND CAP

In order to clean the lid seal after each use, proceed as follows:

- Take the cap off the lid.
- Remove the seal from the lid.
- Clean, scrubbing any particularly dirty areas without using an abrasive, then wash the different parts with detergent or in the dishwasher.
- Put the seal back on: Place the lips of the seal correctly on the inside of the lid.

### POSITION OF LID SEAL:

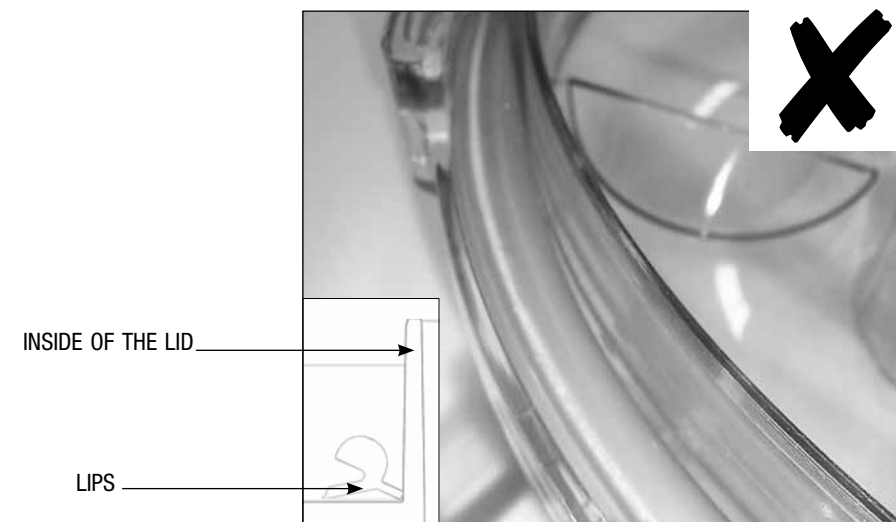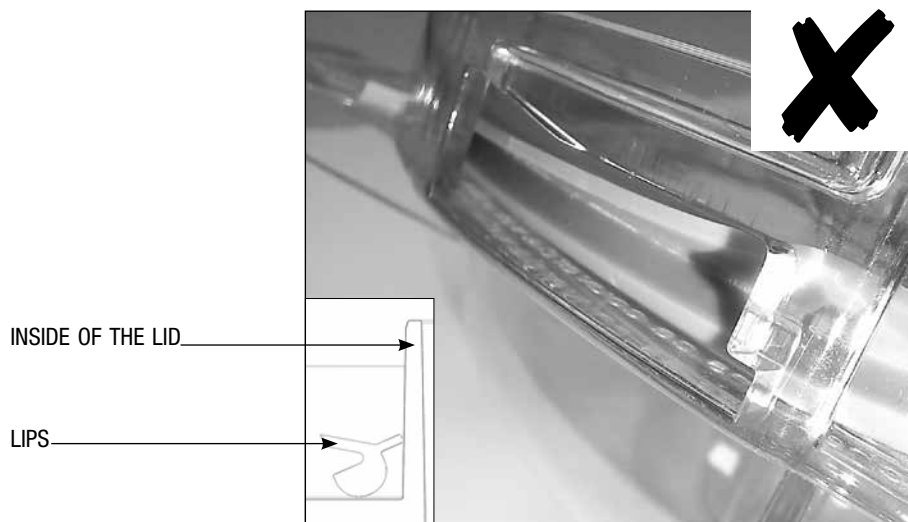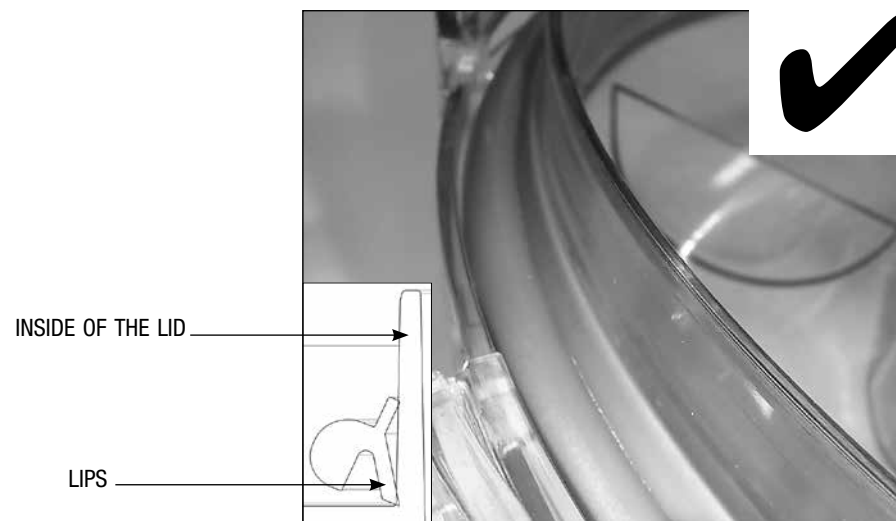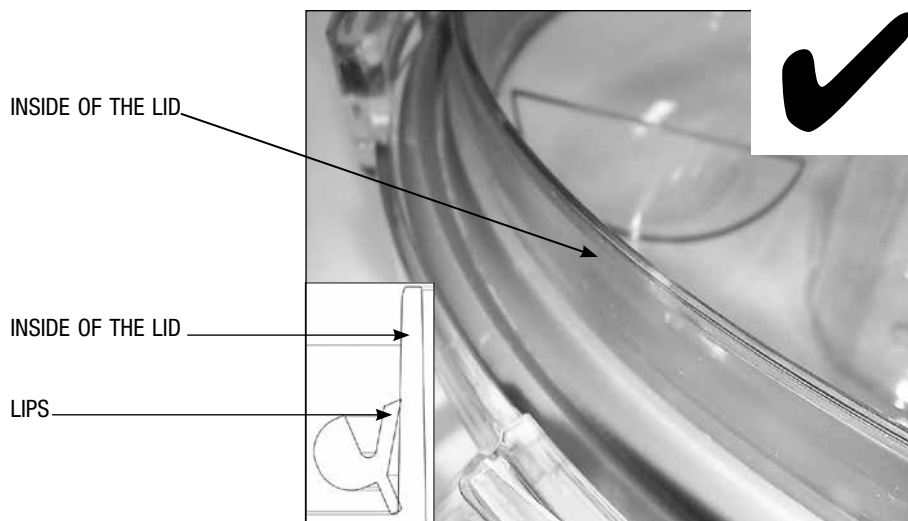

## MAINTENANCE

### • REGULAR MAINTENANCE

The carbon components, belt and blade assembly must be replaced after a specific period of use (under normal conditions). A code will be displayed on the timer (see table for the list of codes) when they need replacing.

### • BLADE

The quality of the cut depends mainly on the sharpness of your blades and the degree of wear and tear. The blade is subject to wear and tear and should be replaced regularly to ensure consistent quality in the final product.

### • LID SEAL


Replace the lid seal if there are liquid leaks.

## TECHNICAL SPECIFICATIONS

### • WEIGHT

	Net	Gross
<b>BL 3</b>	13,5 kg	16,0 kg
<b>BL 5</b>	14,0 kg	16,5 kg

### • DIMENSIONS (in mm)

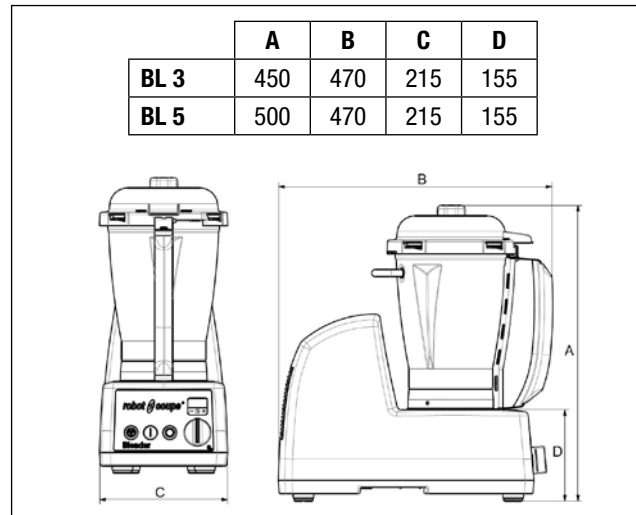

### • WORKING HEIGHT

We recommend that you position the machine on a stable worktop so that the upper edge of the large feed hopper is at a height of between 1.20 m and 1.30 m.

### • NOISE LEVEL

The equivalent continuous sound level when the machine is operating on no-load is less than 70 db (A).

### • ELECTRICAL DATA

The electrical installation must be configured at minimum in accordance with the nominal currents below. The protection devices must be compatible with motor starting, in order to supply the peak current required to start induction motors.

- Single-phase machine

Machine	Motor	Speed (rpm)	Intensity (Amp)
<b>BL 3</b>	230 V / 50 Hz	500 to 12,600	5.5
<b>BL 5</b>	230 V / 50 Hz	500 to 12,600	6

## SAFETY



## WARNING

**The blades are very sharp and must be handled with care.**

The blenders have the following safety features:

### • On/Off safety

The Kitchen Blender is equipped with safety systems to ensure the bowl and lid are both present. If one of these two components is incorrectly positioned, the blender will not work.

### • Operating safety

The motor stops when:

- The lid is opened
- The jug is not locked onto the motor base.

However, it is strongly recommended to stop the machine before opening the lid in order to avoid splashing when working with liquids. Be especially careful not to burn yourself when working with hot liquid preparations.

### • Automatic temperature shut-off

If the blender is used for too long at a time and overheats, it will automatically shut-off. In this case, wait until it has cooled down completely before switching it on again. (Error A04).

### • Overload safety device

If the blender is overloaded (spoon or utensil left in the jug) or the preparation is too thick, the motor will stop. This means that the preparation in the blender is too thick or not suitable for preparation in a blender. To start the blender again, follow the usual operating procedure. (Error A03).

• **No voltage safety device**

If there is a power cut or the blender is disconnected, it can only be restarted by following the normal operating procedure.



## REMEMBER

**Never try to override the locking and safety systems.**

**Never introduce any object into the container where the food is being processed.**

**Never push the ingredients down with your hand.**

**Do not overload the appliance**

## DIAGNOSIS

Your Kitchen Blender has a function for displaying diagnosis codes.

• **LIST OF CODES DISPLAYED**

Code displayed	Description	Cause	Action	Return to standard display
<b>A01</b>	Safety systems: The motor stops	The lid or bowl becomes unlocked while in use.	Lock the lid and bowl then start the machine again.	Automatic
<b>A02</b>	Bowl detection: The motor does not start	5L bowl used on a BL3 machine.	Use a 3L bowl.	Automatic
<b>A03</b>	Motor overload: The motor stops while in use.	High overload on motor	Start the machine again, reducing the load or adding liquid to the preparation as needed.	Press the PULSE, START or STOP button
<b>A04</b>	Normally-open AC drive failsafe is overheating: The motor stops while in use	High temperature measured in the machine	Let the machine cool down. Check that the vents under the motor base are not obstructed. Reduce the load or add liquid to the preparation as needed.	Automatic as soon as the temperature drops below 50°C
<b>A05</b>	Safety systems: The motor does not start	Lid or bowl not locked when the machine is turned on.	Lock the lid and/or bowl then start the machine again.	Automatic
<b>B01</b>		Preventive maintenance of the belt	Changing the belt is recommended. Contact the after-sales service	Automatic
<b>B02</b>		Preventive maintenance of the carbon brushes	Changing the brushes is recommended. Contact the after-sales service	Automatic
<b>B03</b>		Preventive maintenance of the support cartridge	Changing the support cartridge is recommended. Contact the after-sales service	Automatic
<b>C02</b>	Speed inconsistency: The motor does not start, or stops while in use.	The blades are blocked or the motor rotation speed does not match the selected speed.	Unblock the blades or start at a higher speed, then return to your working speed. Reduce the load or add liquid to the preparation as needed.	Press the PULSE or START or STOP button
<b>C04</b>	Non-compliant braking: The motor stops and does not start again	Electronic component problem	Contact after-sales	Cannot be resolved by the user
<b>C40 to C47</b>	Displayed when the machine is connected to the mains	Code confirming the machine is correctly configured.	The code is displayed every time the machine is connected to the mains	
<b>Other message</b>			Contact after-sales	

## STANDARDS

Consult the declaration of compliance on page 2.



*robot*  *coupe*®

**ELECTRICAL AND  
WIRING DIAGRAMS**




BL 5 - BL 3

230V/50Hz - 1~

SCHEMA ELECTRIQUE

ELECTRIC DIAGRAM

ELEKTRISCHES SCHALTBILD

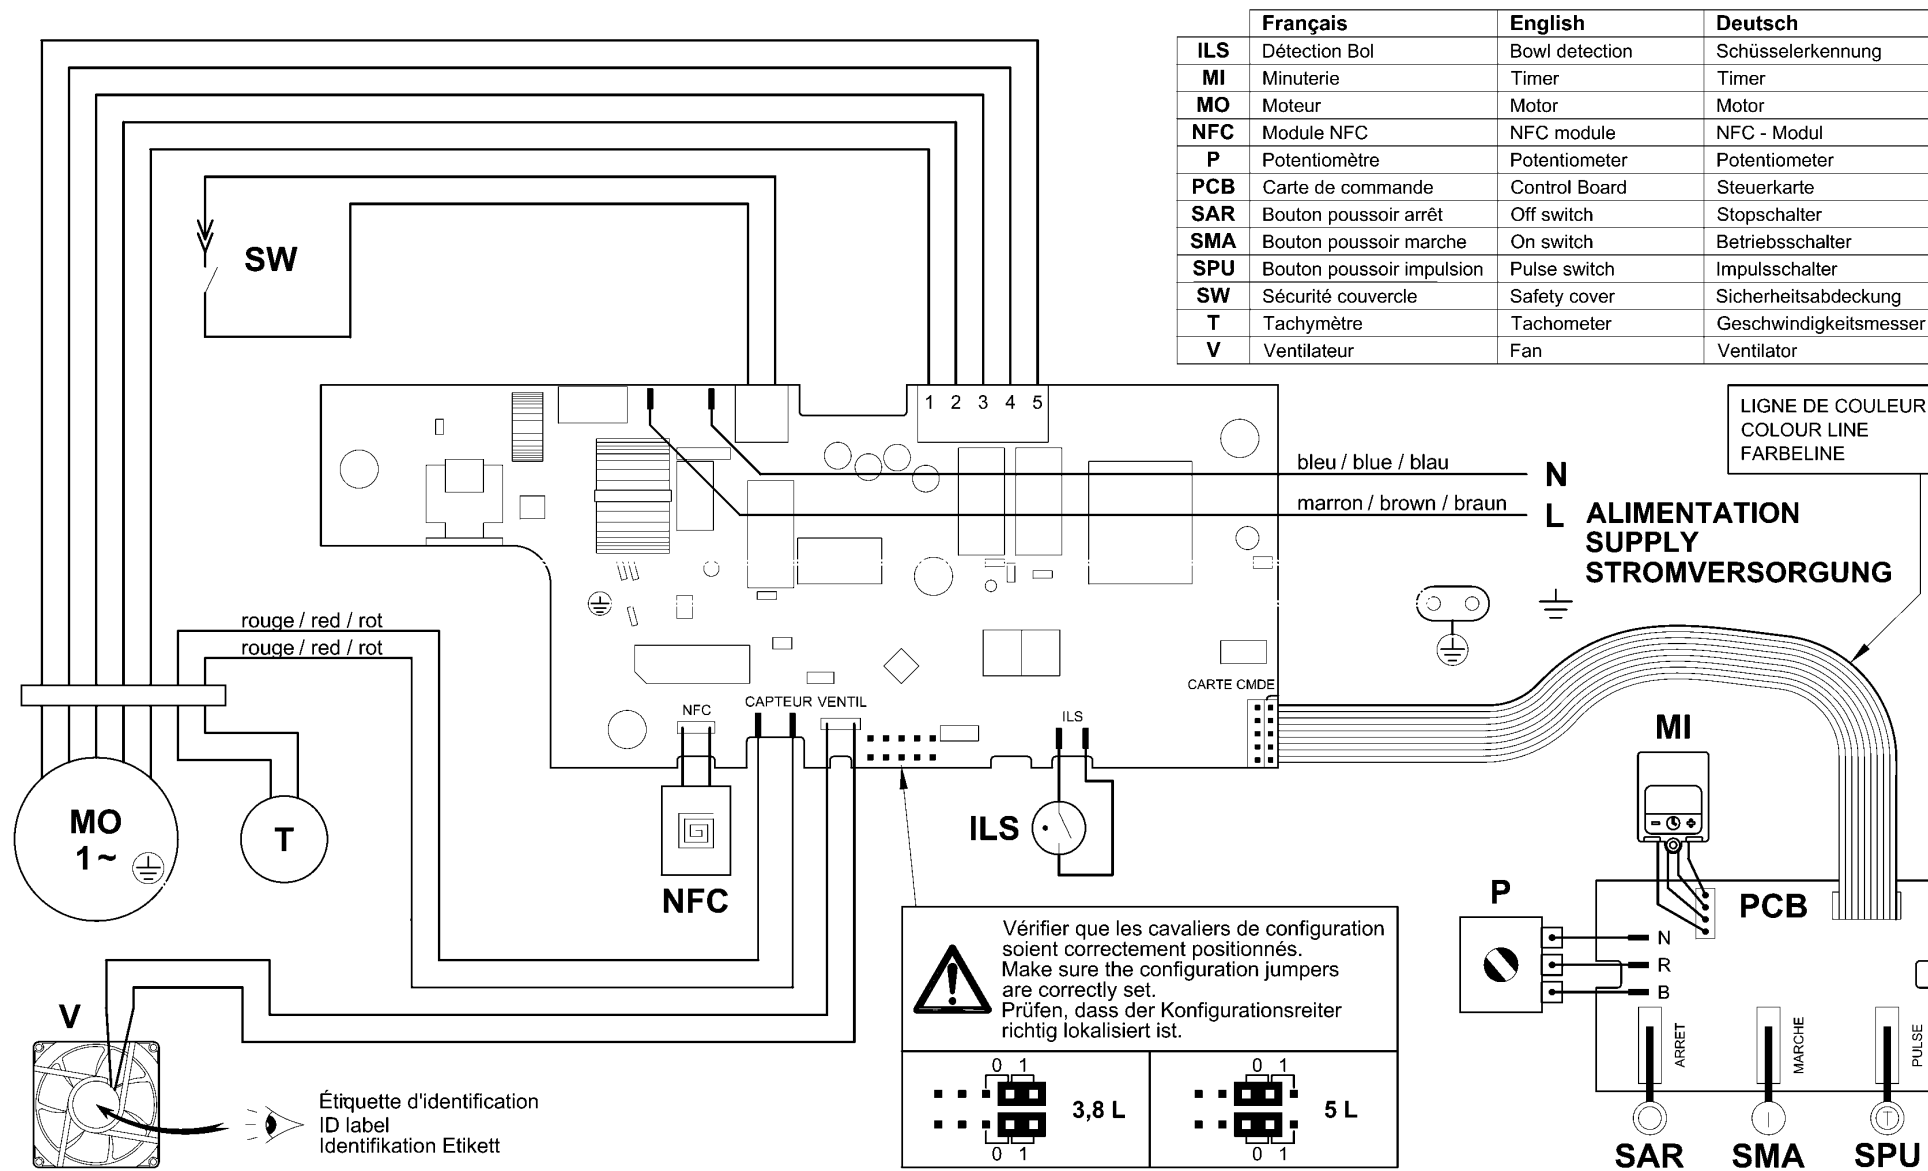

robot@coupe®

N° 403563

C : 10/20







**robot coupe**<sup>®</sup>

**Head Office, French,  
Export and Marketing Department:**

48, rue des Vignerons  
94300 Vincennes - France  
Tel.: 01 43 98 88 15  
Email: international@robot-coupe.com

**Robot Coupe  
Australia Pty Ltd:**

Unit 3/43 Herbert St  
Artarmon NSW 2064 Australia  
Tel.: (02) 9478 0300  
Email: orders@robotcoupe.com.au

**Robot-Coupe  
U.K. LTD:**

Fleming Way, Isleworth,  
Middlesex TW7 6EU  
Tel.: 020 8232 1800  
Email: sales@robotcoupe.co.uk



37002314403551

Réf. : 403 551 - 07/02/2023 - Anglais