



Buffalo Gas BBQ

Instruction manual



**Model:
CF732**

Safety Instructions

- Read all instructions before use and retain for future reference.
- Follow all warning notices on the appliance.
- Never allow children to operate this appliance.
- **For outdoor use only.**
- Position on a flat, stable surface.
- **Warning:** Accessible parts are very hot. Take great care, especially when children, elderly people, and animals are present. 
- Always use oven gloves when cooking or carrying out any adjustments to the barbecue.
- Use purpose designed barbecue tools with long, heat resistant handles.
- Do not cover the appliance before it completely cools down.
- Do not move the appliance after lit, during use or immediately after use before it completely cools down.
- Do not leave the appliance unattended during use.
- Turn off the gas supply at the gas cylinder or regulator after each use, or before carrying out any adjustments.
- Do not modify the appliance in any way.
- Any modification of the appliance, misuse, or failure to follow the instructions may be dangerous and will invalidate your warranty.
- Never use accessories which are not recommended by the manufacturer. Only use original parts and accessories.
- Do not use this appliance in enclosed areas, or near flammable materials (Petroleum based products, thinners or any other solid object that carries a flammable warning label).

- The appliance must not have any overhead obstruction, e.g. trees, shrubs, lean-to roofs. Ensure a clearance of at least 1m around the appliance for ample ventilation.
- Do not store or use gasoline or Methylated Fuels or any other flammable vapours and liquids in the vicinity of this or any other appliance.
- Never light a gas appliance with gasoline or combustible fluids!
- Do not store any other gas cylinder in the vicinity of this or any other appliance.
- Keep a fire extinguisher (powder type) handy.
- Keep any electrical cords and fuel supply hose away from the heat surfaces.
- Do not use to heat any sealed glass/container with food. Pressure may build up and cause the container to burst, possibly resulting in personal injury or damage to the appliance.
- Do not attempt any unauthorized interference of the main controls on this gas appliance, i.e. gas taps, injectors, valves, etc.
- During use, do not attempt to disconnect any gas fitting part on the gas appliance or the gas regulator/cylinder.
- Clean the appliance after use. For cleaning surfaces in contact with food, please refer to the "Cleaning and Maintenance" section of this manual.
- Do not obstruct any ventilation openings in the appliance body.
- Do not enlarge burner ports or orifice/nozzle openings when cleaning the burner or valves.
- It is recommended this gas appliance be serviced (at least annually) by a professional. Do not service it yourself.

Gas, regulator and hose

- For use with LPG bottled gas only. A suitable regulator must be used for butane, propane or mixes.
- LPG gas cylinders should rest on a stable, flat surface.
- Do not place the gas bottle directly underneath the barbecue.
- LPG gas cylinders should never be stored or laid on their side, in the horizontal position. A leak would be very serious and liquid could enter the gas line with serious result.
- Ensure to use gas hoses with heatproof temperature of higher than 80°C.
- The hose should hang freely with no bends, twisting, tension, folds, or kinks that could obstruct free flow of gas. Always inspect the hose for cuts, cracks, perishing, or excessive wear before use.
- Apart from the connection point, no part of the hose should touch any hot barbecue parts. If the hose shows any sign of damage, replace it immediately with one suitable for use with LPG gas which meets the national standards for the country of use.
- Before use, ensure to check for gas leak (→ Gas leak testing). This is the only safe and sure way to detect any gas leaking from joints and connections of the barbecue after assembly.
- Perform leak test annually, and whenever the gas cylinder is disconnected or reconnected.
- **Do not use an open flame for gas leak test at any time.**
- **In case of gas leak or gas odour:**
 - Stop using the appliance and turn off gas supply to it.
 - Extinguish any open flame.
 - Check for damages, poor connections, etc.
 - If odour continues, contact your local dealer.

Introduction

- Please take a few minutes to carefully read through this manual. Correct maintenance and operation of this appliance will provide the best possible performance from your BUFFALO product.
- BUFFALO prides itself on quality and service, ensuring that at the time of unpacking the contents are supplied fully functional and free of damage.
- Should you find any damage as a result of transit, please contact your BUFFALO dealer immediately.

Installation

Selecting a location

- This appliance is for outdoor use only and should be placed in a well-ventilated area.
- The sides of the barbecue should **NEVER** be closer than 1 metre from any combustible surface, including trees and fences and make sure that there are no heat sources nearby (cigarettes, open flames, spark etc.). Keep away from any flammable materials!

Choosing the suitable gas cylinder and regulator

This barbecue can use either propane or butane or propane/butane mixed LPG (liquid petroleum gas) bottled gas. Propane bottles, will supply gas all year round, even on cold winter days. Butane bottles will supply sufficient gas in summer, but it may affect the performance of the barbecue and restrict the heat output available from the burners, particularly once the gas temperature starts to fall below +10°C.

- You will need LPG gas bottle and proper regulators under the gas pressure to operate this gas appliance.
- Choose the proper regulator according to the appliance category and gas pressure, for example, use 37mbar regulator with appliance category I3+ for propane gas.

Country of Destination	Appliance Category	Gas and Supply Pressure	Injector Size Ø	
			Main burner	Side burner
BE, CH, CY, CZ, ES, FR, GB, GR, IE, IT, LT, LU, LV, PT, SK, SI	I3+(28-30/37) 	Butane(G30) 28-30 mbar	0.86mm	0.76mm
		Propane(G31) 37 mbar	0.86mm	0.76mm
Note: Marking on injector, for example, 0.86 indicates that the size of the injector is 0.86mm.				



Warning! Ensure to have the proper regulator and cylinder in order for the barbecue to operate safely and efficiently. Use of an incorrect or faulty regulator is dangerous and will invalidate any warranty. Consult your local gas dealer for the most suitable gas cylinders and regulators.


Connecting the gas hose to the appliance and the regulator



Caution!

- Before connection, ensure all the control switches of the appliance are at the **OFF** position.
- Ensure the hose to be used is of 8-10mm diameter and no more than 1.5m long.
- Change the hose at least every 2 years or whenever it looks worn or damaged.
- We suggest wearing gloves when assembling the hose.

1. Plug the hose head to the connector (if you have trouble to connect the hose, soak the hose head into water for 5 minutes). Tighten the metal clip on the hose with a screwdriver (Fig. 1).

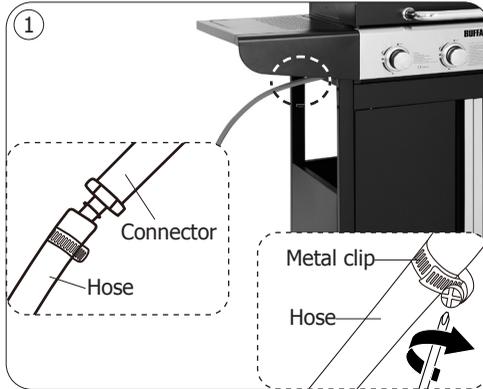

2. Connect the hose from the appliance to the regulator. Secure the connection with the metal clip on the hose.


Note:

- **The date on the gas hose (if supplied) is the manufacturing date, not the expiration date.**
- **When replacing with a new hose, turn off the gas cylinder first. Then disconnect the hose from the gas bottle and gas hose inlet on the appliance.**
- **The height of the gas cylinder is below 80cm, and the width is within 35cm. Net weight of gas cylinder should not be more than 15kg.**
- **The regulator needs to meet the standard of EN16129 with current version and national regulation.**
- **The regulator hose needs to meet the standard of EN16436-1, and the length is less than 1.5 meters.**

Connecting the regulator to the gas cylinder

1. Position the gas cylinder at the left side of your appliance, away from heat and obstructions.
2. Turn the orange cap on the gas cylinder so that the arrow is pointing to the gap in the shroud.
3. Remove the orange safety cap by pulling the lanyard out. Do not use any tools. Leave the cap hanging.

4. Ensure the black sealing washer is fitted inside the cylinder valve.
5. Mount the regulator on the gas cylinder valve and tighten firmly (Fig. 2).

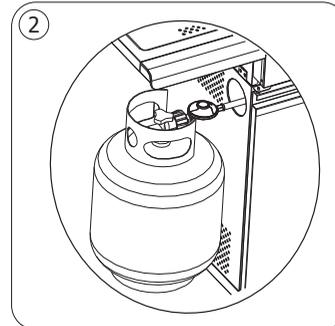


6. Now the appliance is done with all connections and ready for use.

Gas leak testing

Always perform a leak test in a well-ventilated area.

1. Confirm all control knobs are at the **OFF** position (Fig. 3).

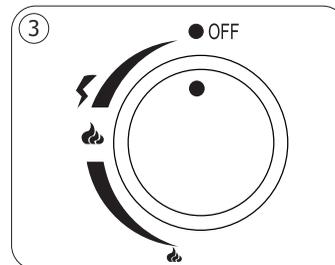

2. Turn on the gas supply at the gas cylinder or regulator. Turn on the appliance as instructed (→ Operation).
3. Check for leaks by brushing a solution of ½ water and ½ soap over all the gas system joints, including all valve connections, hose connections, and regulator connections.
4. If bubbles form over any of the joints, there is a leak.
 - Turn off the gas supply at the gas cylinder
 - Re-tighten all joints
 - Repeat test
 - If bubbles form again, stop using the appliance and contact your local distributor for assistance.
5. Wipe the mixed solution from all joints and connections after leak test.

Disconnecting a gas cylinder

- Except for twin-cylinder installations with a changeover valve, turn off the gas tap if fitted to the appliance. Wait until the burner and pilot light have gone out. For installations with a changeover valve, it is only necessary to switch off the empty cylinder.
- Replace the orange safety cap onto the empty cylinder.

Operation

Seasoning the cooking surfaces before first use

- Make sure the cooking surfaces are clean.
- Apply some oil to the cooking grids.
- Turn on all the knobs to the high position 🔥.
- Wait 5 minutes, switch off and carefully wipe any excess oil from the grids.

Preparation before cooking

- Wipe clean the cooking grids. Let dry thoroughly.
- To prevent foods from sticking to the cooking surface, apply a light coat of cooking/vegetable oil before each barbecuing session.
- Do not face directly over the appliance when lighting.



Note: When cooking for the first time, cooking surfaces colour may change slightly. This is normal and does not indicate any defect.


Lighting the appliance



Open the lid of the barbecue before attempting to light the burners.

1. Ensure all control switches of the appliance are at **OFF** position.
2. Turn on gas supply at the regulator or at the gas cylinder valve.
3. Do not light side burner when the lid is closed.

4. To ignite a burner, push down and hold while turning the burner switch to high position 🔥 (middle position) (Fig. 4). A click sound will be heard and ignition will take place.

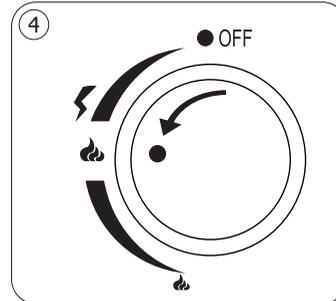

5. Follow same steps to light the other burners.



Warning: If ignition does not occur in 5 seconds, turn the burner switch off and wait 5 minutes. Then repeat the lighting procedures.

Manual ignition

Should automatic ignition fails,

1. Remove the cooking grids and flame tamers.
2. Turn the burner switch anticlockwise to high position 🔥 (middle position) (Fig. 4).
3. Light with BBQ lighter at the distance of 5mm to the burner fire hole.
4. Replace the cooking grids and flame tamers, ensuring to wear heat-resistant gloves.



- **If the lighting still fails after 2 attempts, turn the burner switch to OFF. Wait 5 minutes for the unburnt gas to evaporate. Afterwards, re-light.**
- **For any difficulty with lighting, please consult your dealer.**

Start cooking

1. After ignition, pre-heat the appliance for 10-15 minutes with the high setting. This should be done before each cooking session.
2. After pre-heating, turn the control switch to suit requirements.
3. Place your food on the cooking grids. (The burners heat up the flame tamers underneath the grids, which in turn pass heat to the food. The natural food juices produced during cooking fall onto the hot flame tamer and vapourize. The subsequent rising smoke bastes the food, as it travels upwards, imparting that unique barbecued flavour.)
4. **End of cooking session:** Turn the control switches to high position  and burn for 5 minutes. This procedure will burn off cooking residue, thus making cleaning easier.
5. **Turning off the gas appliance:** After use, turn all the control switches to **OFF** position. Then switch off the gas supply at the gas cylinder or regulator.



Energy saving tips:

- Turn the appliance off as soon as cooking is completed.
- Do not preheat longer than recommended.
- Do not use a higher setting than required.



Warning! Danger of scalding! Always protect your hands when handling parts near the cooking surface.
Always open the lid slowly and carefully as heat and steam trapped inside may cause severe burning.

Flare-up control

- Flare-ups occur when meat is barbecued, and its fat and juices fall upon the hot flame tamer. Smoke of course helps give food its barbecued flavour, but it is best to avoid excessive flare-up to prevent food from being burned.
- To control flare-ups, it is **ABSOLUTELY ESSENTIAL** to trim away excess fat from meat and poultry before grilling. Use cooking sauces and marinades sparingly and try to avoid very cheap cuts of meat or meat products as these tend to have a high fat and water content. The burners should always be set to low settings during cooking.
- When flare-ups do occur, they can usually be extinguished by applying baking soda or salt directly onto the flame tamer. Always protect your hands when handling parts near the cooking surfaces.

Danger of scalding!

Fat fires

- After each cooking session, empty and clean the oil cup of food debris. If the barbecue is to be used for large gatherings, it will be necessary to turn off and cool the barbecue every 2 hours to remove food debris from the oil cup and clean it out.
- Cleaning frequency may need to be increased if very fatty foods or cheap meat products are being cooked. Failure to do this may result in a fat fire, and thus cause injury and seriously damage the barbecue.
- **In the event of a fat fire:**
 - Turn all control knobs to **OFF** position.
 - Turn off the gas supply at the gas cylinder or regulator.
 - Keep at a safe distance from the barbecue and wait until the fire has burnt out.
 - Never douse a barbecue with water. If an extinguisher is used, it should be a powder type.
 - Do not remove the oil cup.
 - If the fire does not abate or even seems to worsen, contact your local Fire Brigade for assistance.

Cleaning, care & maintenance



Warning!

- **Regularly clean your barbecue between uses, especially after extended periods of storage.**
- **Ensure the barbecue and its components are sufficiently cool before cleaning and storage. Never douse the barbecue surfaces with water while still hot.**

- To extend the life and maintain the condition of your barbecue, we strongly recommend that the unit be covered when left outside for any length of time, especially during the winter months. Heavy-duty barbecue covers and other accessories are available from your local stockist.
- Inspect the barbecue on a regular basis as damp or condensation can form which may result in damage to the appliance. It may be necessary to dry the barbecue internally. It is possible for mould to grow on any fat-gathering parts. This should be cleaned off with hot soapy water.
- A chrome cleaner may be used on chrome parts if required. **To prevent rusting, wipe chrome parts with cooking oil after rinsing and drying.**
- Any rust that does not come into contact with the food should be treated with a rust inhibitor and painted with barbecue paint or a heat resistant paint. Any rust on cooking surface should burn off or be rubbed off.

Body

- Regularly remove excess grease or fat using a cloth dampened with hot soapy water. Dry thoroughly.
- Excess fat and food debris can be removed from inside the body using a soft plastic or wooden scraper.
- Do not immerse the body or hose in water.

Burners

- Burning off any residue after cooking will keep the burners clean.
- Periodically check the burner to ensure it is free from insects and spiders which may clog the gas system, deflecting gas flow.
- Ensure to clean pipes on burner very carefully and make sure that there are no obstructions. We recommend the use of a pipe cleaner to clean the pipe area.

Cooking surfaces, oil cup, and oil tray

- After cooling down, remove any fat or food particles with a plastic or wooden scraper. Do not use a steel scraper or wire brush.
- Clean with hot soapy water. Rinse well and dry thoroughly.
- Do not use scouring pads or powders as they can permanently damage the finish. Due to the weight of the parts, we do not recommend cleaning in a dishwasher.
- Failure to keep clean, and excessive buildup can result in a fat fire. This can be hazardous and severely damage the barbecue. This is not a fault in the barbecue and is therefore not covered by the warranty.

Storage

- Store in a cool dry place with the lid closed in position. If storing the gas appliance outdoors, ensure to check that all areas under the front panel are free from any obstructions (insects, for example). This area must be kept free as this may affect the flow of combustion or ventilation air.
- If storing the gas appliance indoors, the gas cylinder must be disconnected and left outside. The gas cylinder should always be stored outside, in a dry, well-ventilated area, away from any sources of heat or ignition. Do not let children tamper with the cylinder.
- When using the barbecue after extended periods of storage, ensure to check for gas leaks and any obstructions in the burner. Also follow the cleaning procedures to ensure the gas appliance is safe.

Troubleshooting

A qualified technician should carry out repairs if required.

Fault	Probable Cause	Solution
Gas leaking from cracked/cut/burned hose	Damaged hose	Turn off gas at LPG bottle. If hose is cut or cracked, replace hose. See LPG bottle lead test and connection regulator to the LPG bottle
Gas leaking from LPG bottle	Mechanical failure due to resting or mishandling	Turn off LPG bottle valve
Gas leaking from LPG bottle valve	Failure of bottle valve from mishandling or mechanical failure	Turn off LPG bottle valve. Return LPG bottle to gas supplier
Gas leaking between LPG bottle and regulator connection	Improper installation, connection not tight, failure of rubber seal	Turn off LPG bottle valve, remove regulator from cylinder and visually inspect rubber seal for damage. See LPG bottle test and connection regulator to the LPG bottle
Fire coming through control panel	Fire in burner tube section of burner due to partial blockage	Turn off control knobs and LPG bottle valve. After fire is out and appliance is cold, remove burner and inspect for spider nests or rust. See natural hazard and cleaning the burner assembly pages.
Grease fire or continuous excessive flames above cooking surface	Too much grease buildup in burner area	Turn off LPG Bottle. Allow flames to die down. After cooling, clean food particles and excess grease from inside firebox area, grease cup/pan/ tray, and other surfaces
Burner will not light using igniter	Gas issues	
	Trying to light wrong burner	→ Lighting the appliance
	Burner not engaged with control valve	Make sure valve are positioned inside of burner tubes
	Obstruction in burner	Ensure burner tubes are not obstructed with spider webs or other objects (→ Cleaning, care & maintenance)
	No gas flow	Make sure LPG bottle is not empty. If not empty, see " Sudden drop in gas flow "
	Vapour lock at coupling nut to LPG bottle	Turn off knobs and disconnect coupling nut from LPG bottle. Reconnect and retry
	Coupling nut and LPG bottle valve not fully connected.	Turn the coupling nut approximately one-half to three-quarters

Fault	Probable Cause	Solution
Burner will not light using igniter	Electrical issues	
	Electrode cracked or broken; "sparks at crack"	Replace electrode
	Electrode tip not in proper position	Tip of electrode should be pointing toward port hole in burner. The distance should be 1/8" to 3/16". Adjust if necessary
	Wire and/or electrode covered with cooking residue	Clean wire and or electrode with rubbing alcohol and clean swab
	Wires are loose or disconnected	Reconnect wires or replace electrode/wire assembly
	Wires are short-circuited (sparking) between igniter and electrode	Replace igniter wire or igniter
Sudden drop in gas flow or low flame	Push button sticks at bottom sparking between igniter and electrode	Inspect wire insulation and proper connection. Replace wires if insulation is broken
	Grease buildup	Clean burners and inside of appliance / firebox
	Excessive fat in meat	Trim fat from meat before grilling
Flames blow out	Excessive cooking temperature	Set the control knob to a lower setting
	High or gusting winds	Move the appliance to prevent it from facing wind directly or increase flame height
	Low on LPG gas	Refill LPG bottle
Flames blow out	Excess flow valve tripped	→ Sudden drop in gas flow
	Persistent grease fire	Turn all knobs to OFF . Turn gas off at LPG bottle. Let fire burn out. After appliance cools, remove and clean all parts
Flashback... (fire in burner tube(s))	Grease trapped by food buildup around burner system	Turn all knobs to OFF . Clean burner and/or burner tubes (→ Cleaning, care & maintenance)
Flare-up	Burner and burner tubes are blocked	Turn all knobs to OFF . Clean burner and/or burner tubes (→ Cleaning, care & maintenance)
	Grease buildup	Clean burners and inside of appliance/ firebox
	Excessive fat in meat	Trim fat from meat before grilling
Flare-up	Excessive cooking temperature	Set the control knob to a lower setting
	One burner does not light from other burner(s)	Clean carry-over tube with wire brush
	Grease buildup or food particles at end of carryover tube	

Technical specifications

Note: Due to our continuous improvement process, the product specifications are subject to change without notice.

Country of Destination	Appliance Category	Gas and Supply Pressure	Injector Size Ø		Total Nominal Heat Inputs (Hs)
			Main burner	Side burner	
BE, CH, CY, CZ, ES, FR, GB, GR, IE, IT, LT, LU, LV, PT, SK, SI	I3+(28-30/37)	Butane(G30) 28-30 mbar	0.86mm	0.76mm	14.5 kW 1055 g/h
		Propane(G31) 37 mbar	0.86mm	0.76mm	14.5 kW 1036 g/h

Specifications subject to change without prior notice.

Compliance

BUFFALO parts have undergone strict product testing in order to comply with regulatory standards and specifications set by international, independent, and federal authorities.

BUFFALO products have been approved to carry the following symbol:




All rights reserved. No part of these instructions may be produced or transmitted in any form or by any means, electronic, mechanical, photocopying, recording or otherwise, without the prior written permission of BUFFALO.

Every effort is made to ensure all details are correct at the time of going to press, however, BUFFALO reserve the right to change specifications without notice.

Assembly instructions

Exploded view

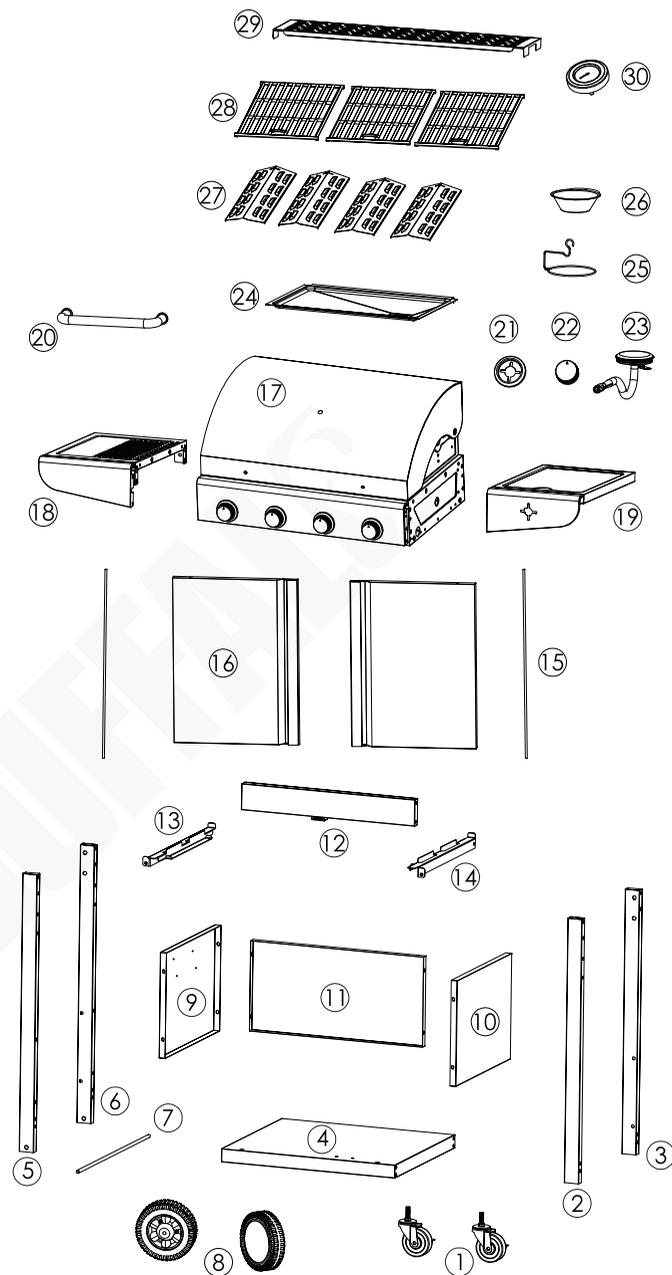


Note: Assembling tools needed (Not supplied)





1.	Castor with brake (x 2)
2.	Right front leg (x 1)
3.	Right back leg (x 1)
4.	Bottom panel (x 1)
5.	Left front leg (x 1)
6.	Left back leg (x 1)
7.	Wheel Axle (x 1)
8.	Wheel (x 2)
9.	Left side panel (x 1)
10.	Right side panel (x 1)
11.	Back panel (x 1)
12.	Beam (x 1)
13.	Firebox fixed plate, left (x 1)
14.	Firebox fixed plate, right (x 1)
15.	Door handle (x 2)
16.	Door (x 2)
17.	Main unit (x 1)
18.	Side table (x 1)
19.	Side burner (x 1)
20.	Handle (x 1)
21.	Side burner components
22.	
23.	
24.	Oil tray (x 1)
25.	Oil cup support (x 1)
26.	Oil cup (x 1)
27.	Flame tamer (x 4)
28.	Cooking grid (x 3)
29.	Warming rack (x 1)
30.	Thermometer (x 1)

Parts list

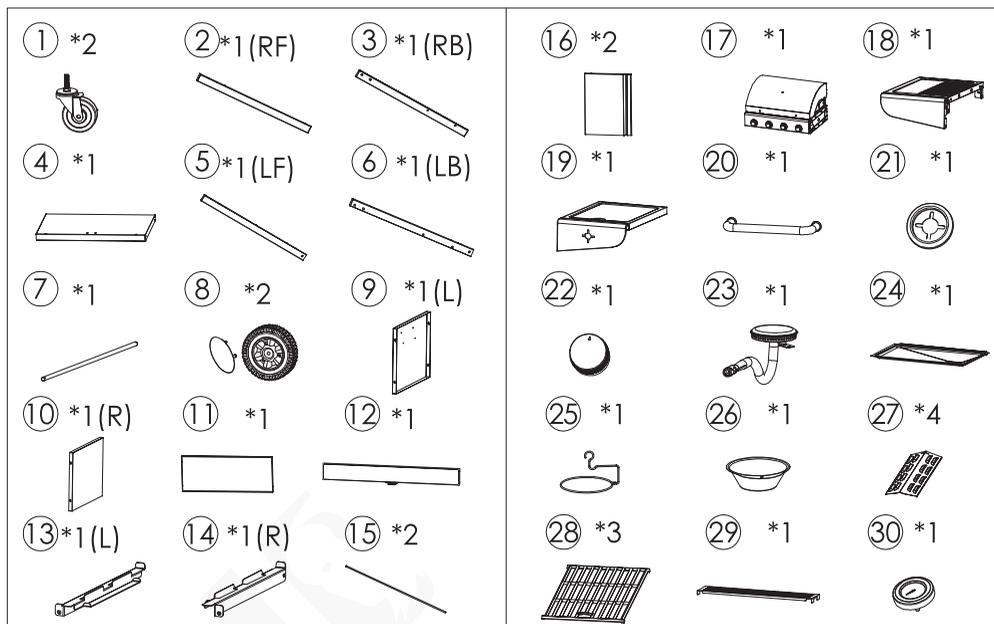

Hardware List

	A	Bolt M5*55 (x 20)
	B	Bolt M5*10 (x 33)
	C	Bolt M4*8 (x 6)
	D	Pin (x 2)
	E	Magnet (x 1)
	F/H	Ring nut Ø25*21 (x 2)
	G	Frame door bushing (x2)
	I	Flat Washer Ø28*2 (x 1)
	J	Plug M5*16 (x 3)
	K	Bolt M6*15 (x 2)



Note: Specifications subject to change without prior notice.



Whilst every care is taken in the manufacture of this product, care must be taken during assembly in case sharp edges are present.



Ensure to set the brakes on the castors to keep the appliance in position.





Note: Assembling tools needed (Not supplied)




Assembly steps

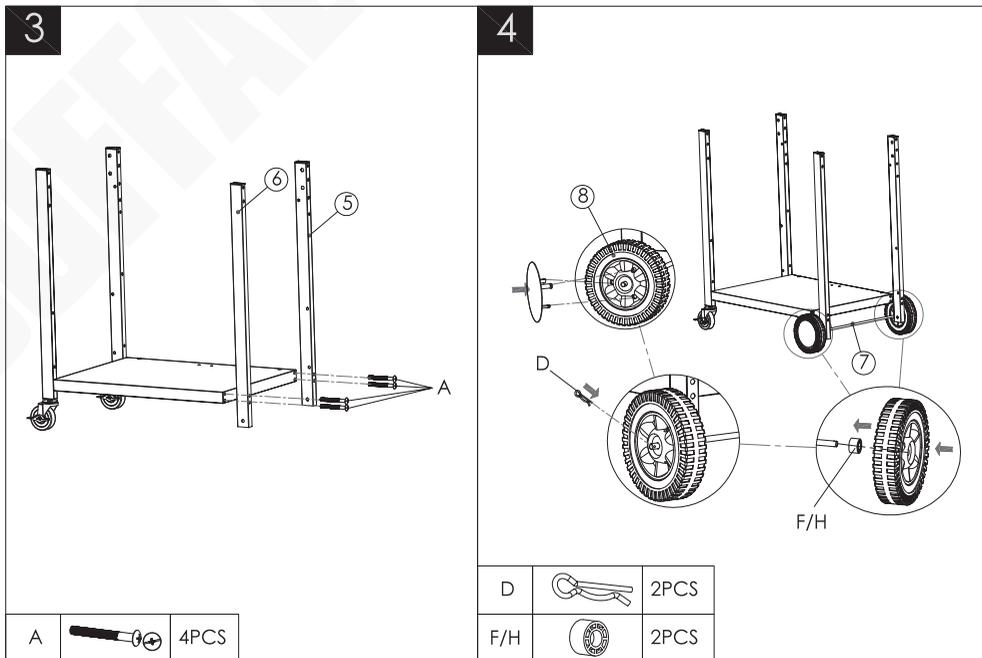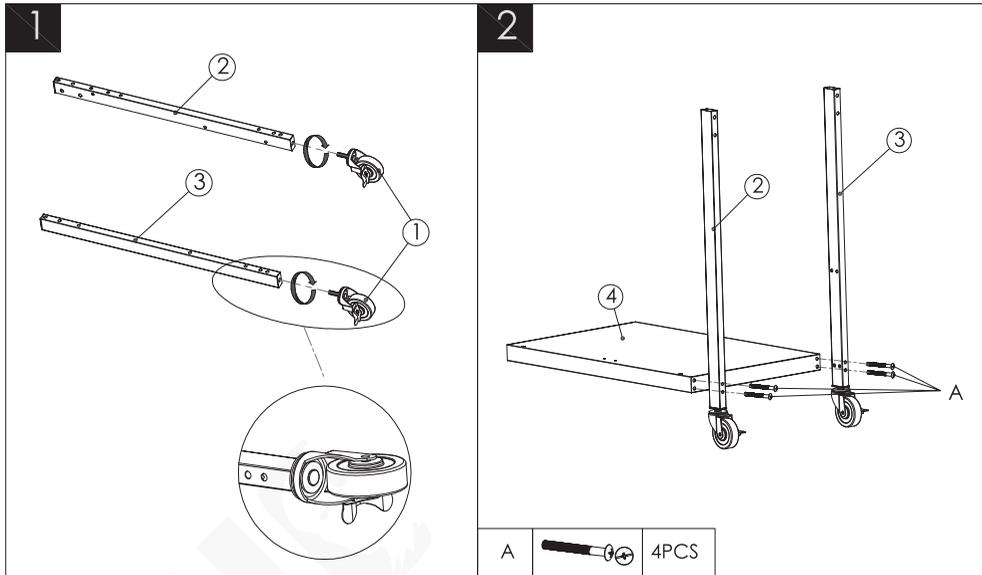

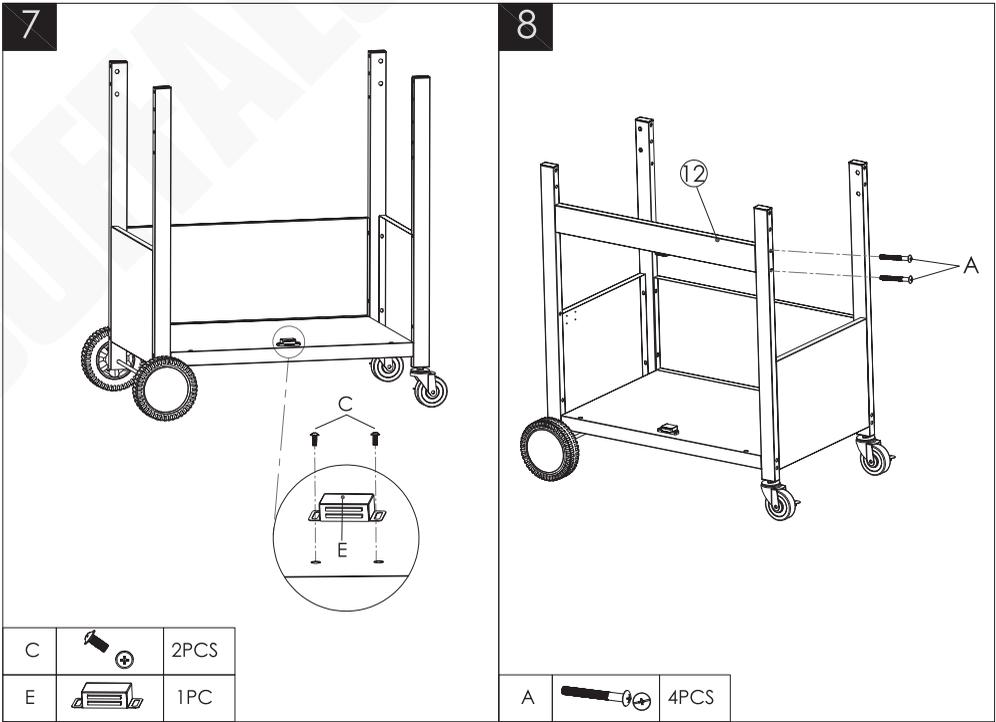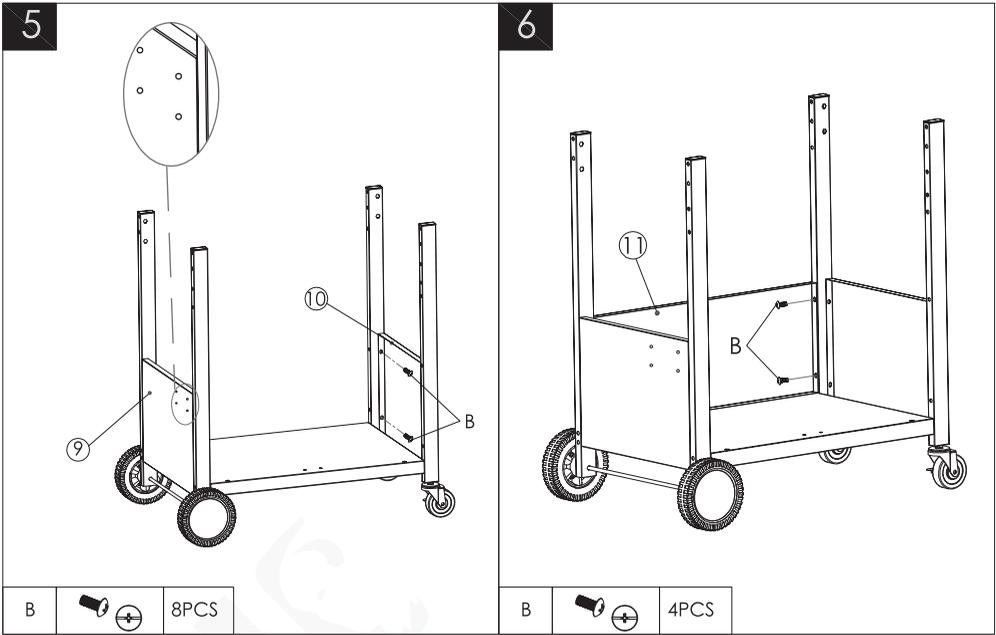


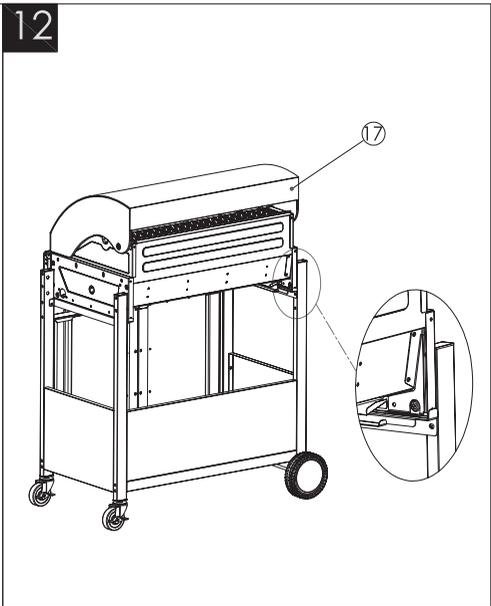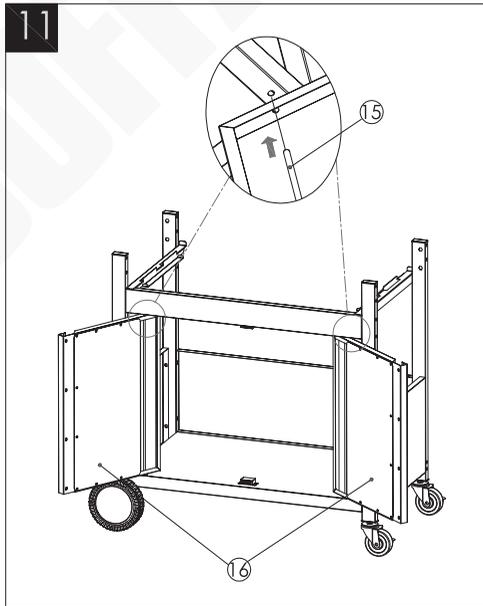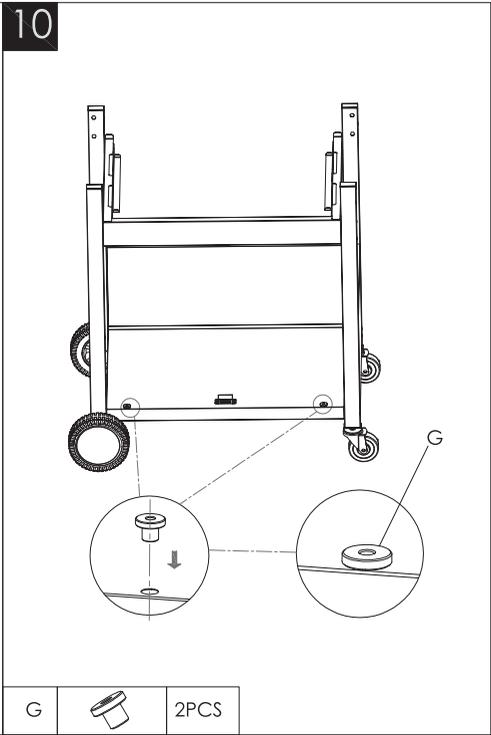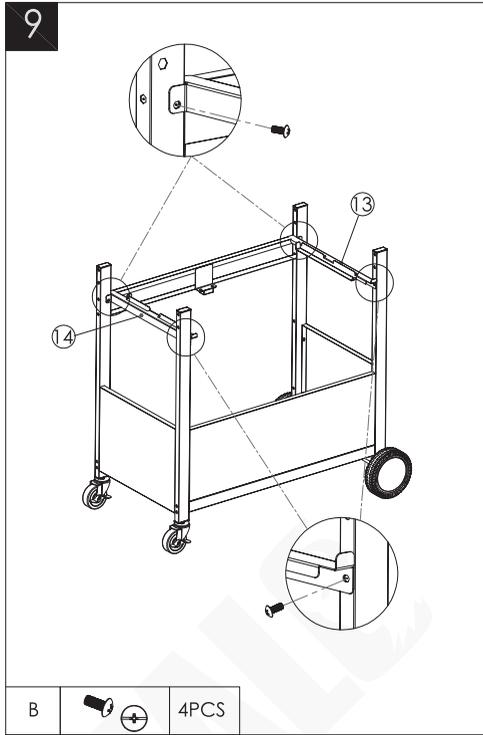

13

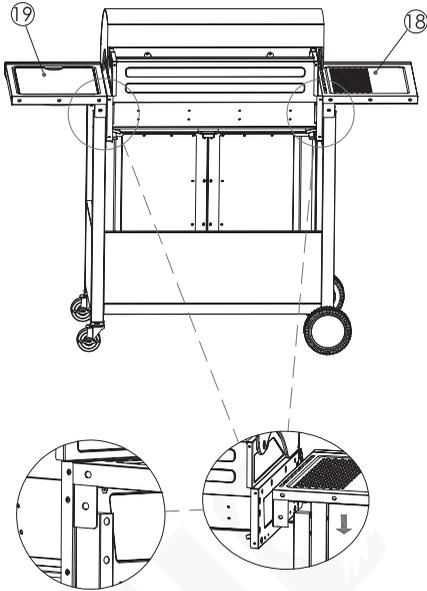


14

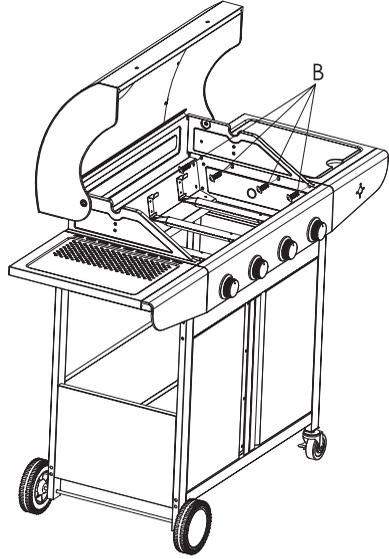


B		8PCS
---	--	------

15

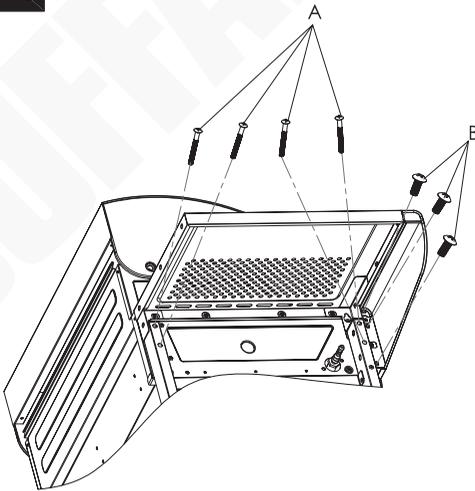


A		8PCS
B		6PCS

16

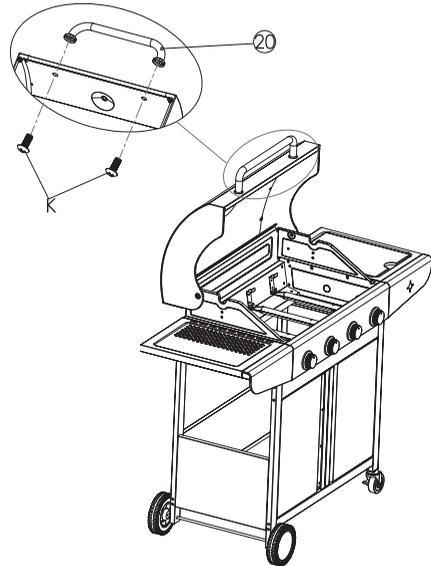


K		2PCS
---	--	------

17

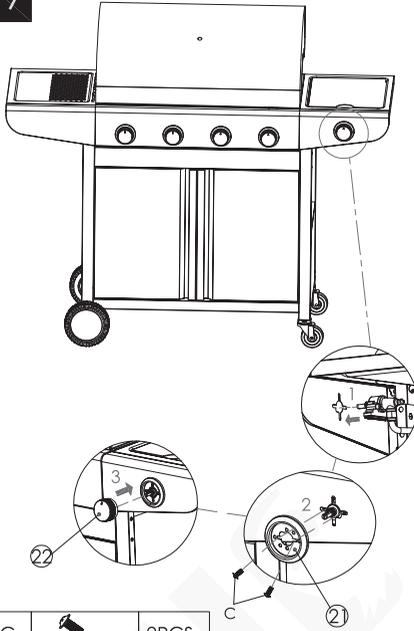


C  2PCS

18

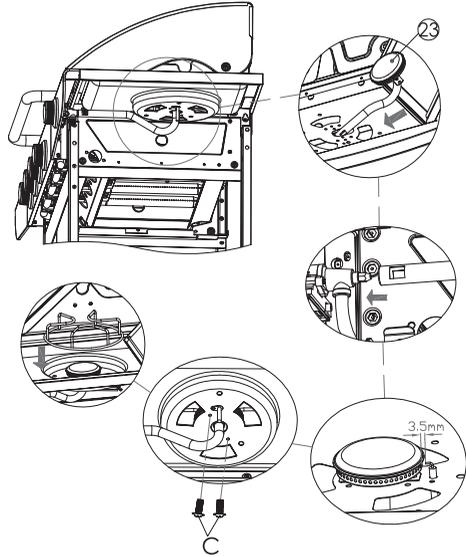


C  2PCS


19

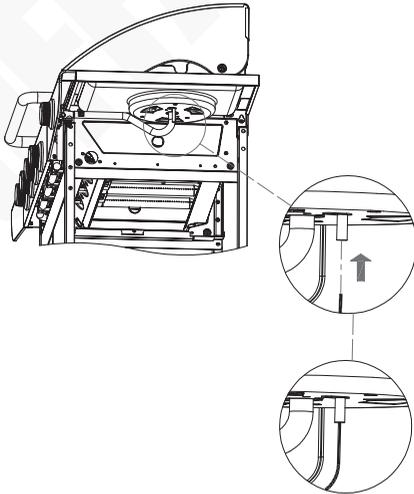


20

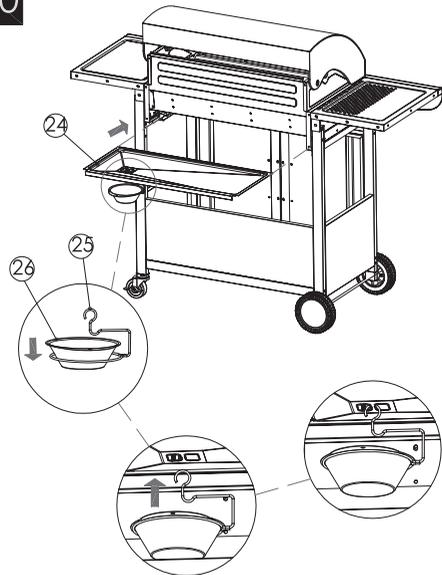

21

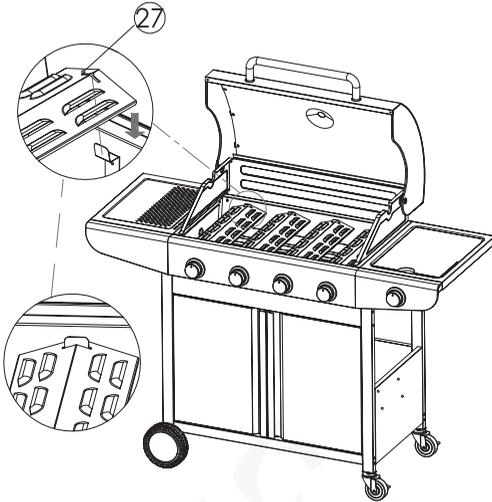


22

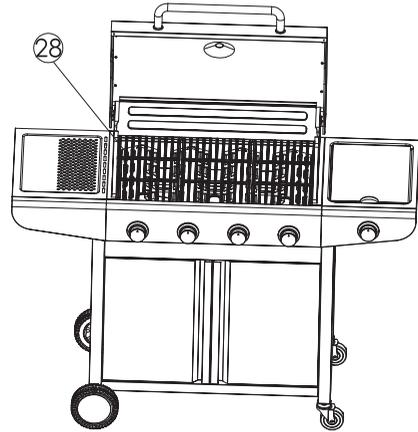

23



24

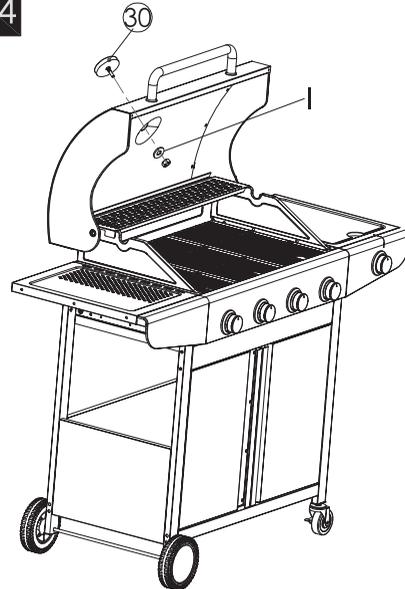

I




1PC

25




B			3PCS
J			3PCS

26

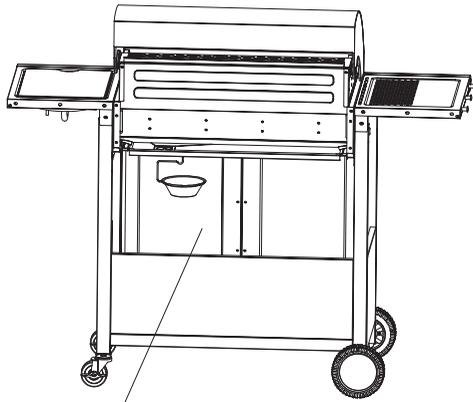

Warning: NEVER place the gas cylinder inside the chamber!

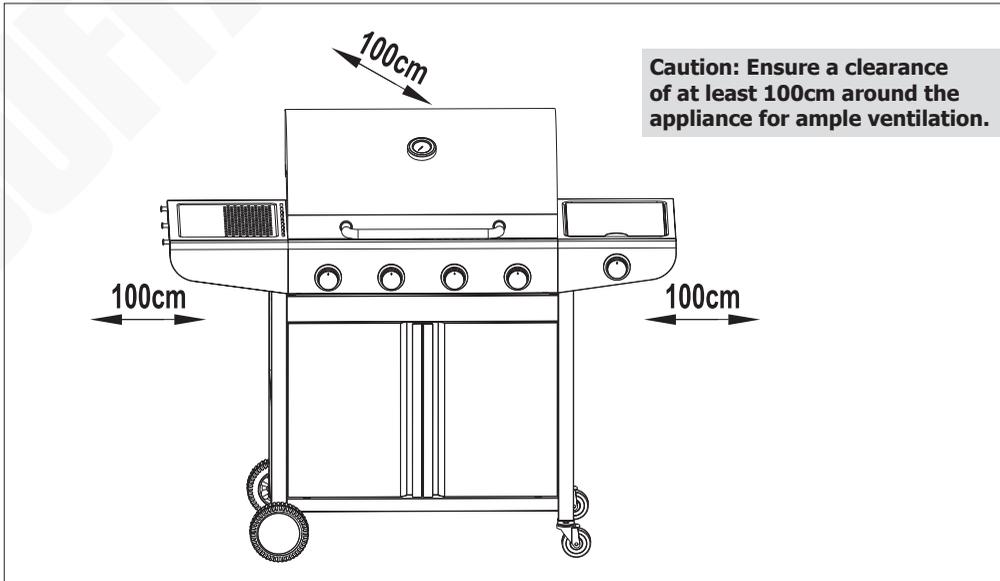

Caution: Ensure a clearance of at least 100cm around the appliance for ample ventilation.

DECLARATION OF CONFORMITY

• Conformiteitsverklaring • Déclaration de conformité • Konformitätserklärung • Dichiarazione di conformità • Declaración de conformidad

Equipment Type • Uitrustingstype • Type d'équipement • Gerätetyp • Tipo di apparecchiatura • Tipo de equipo

Object of the declaration • Voorwerp van de verklaring • Objet de la déclaration • Gegenstand das deklariert werden soll • Oggetto della dichiarazione • Objeto de la declaración • Objeto da declaração
Model • Modèle • Modell • Modello • Modelo

Batch No./ Serial No. • Batchnr./Serienr. • No. du lot/No. de série • Chargennr./Serien Nr. • Lotto N./N. di serie • N° de Lote/N° de Serie •

Application of Council Directives(s)
Toepassing van Europese Richtlijn(en) • Application de la/des directive(s) du Conseil • Anwendbare EU-Richtlinie(n) • Applicazione delle Direttive • Aplicación de la(s) directiva(s) del consejo

The Notified Body • De Erkende Instantie • Partie notifiée • Der notifizierter Körper • L'ente notificato • El Cuerpo Notificado

Performed & issued the certificate(s) • voerde en vaardigde het (de) certifica(a)t(en) uit • Exécute et délivre les certificats • hat dieses Zertifikat angefertigt und ausgestellt • Ha portato a termine E ha rilasciato il/i certificato/i • realizó y emitió el/los certificado(s)

Manufacturer Name • Naam fabrikant • Nom du producteur • Name des Herstellers • Nome del produttore • Nombre del fabricante

Manufacturer Address • Adres fabrikant • Adresse du producteur • Anschrift des Herstellers • Indirizzo del produttore • Dirección del fabricante

This declaration of conformity is issued under the full responsibility of the manufacturer. I, the undersigned, hereby declare that the equipment specified above conforms to the above Directive(s) and Standard(s).

Deze conformiteitsverklaring werd uitgevaardigd onder volledige verantwoordelijkheid van de fabricant. Ik, de ondergetekende, verklaar hierbij dat de hierboven gespecificeerde uitrusting goedgekeurd is volgens de bovenstaande Richtlijn(en) en Standaard(en).

La présente déclaration de conformité est délivrée sous l'entière responsabilité du fabricant. Je soussigné, confirme la conformité de l'équipement cité dans la présente à la / aux Directive(s) et Norme(s) ci-dessus.

Diese Konformitätserklärung wird unter der vollen Verantwortung des Herstellers ausgestellt. Ich, der/die Unterzeichnende, erkläre hiermit, dass das oben angegebene Gerät der/den oben angeführten Richtlinie(n) und Norm(en) entspricht.

La dichiarazione di conformità viene rilasciata dietro completa assunzione di responsabilità da parte del produttore. Il sottoscritto dichiara che l'apparecchiatura di sopra specificata è conforme alle Direttive e agli Standard sopra riportati.

La declaración de conformidad se emite bajo la total responsabilidad del fabricante. El abajo firmante declara por la presente que el equipo arriba especificado está en conformidad con la(s) directiva(s) y estándar(es) arriba mencionadas.

Date • Data • Date • Datum • Data • Fecha


Signature • Handtekening • Signature • Unterschrift • Firma • Firma

Full Name • Volledige naam • Nom et prénom • Vollständiger Name • Nome completo • Nombre completo

Position • Functie • Fonction • Position • Qualifica • Posición

{SKU description} 4 Burner Gas BBQ	
{description of the appliance or fitting} BBQ	
{product code(s)} CF732	
{Batch No. or range of serial No.'s} PO5172025-UK	
{relevant legislation and harmonized standards}	
Gas Appliance Regulation (EU) 2016/426	Gas Appliances (Enforcement) and Miscellaneous Amendments Regulations 2018 (UK Statutory Instrument 2018 No. 389)
EN 498:2012	
EN 484:2019	
EN 1860-1:2013+A1:2017	

{Name; address}	
KWA Nederland B.V Wilmensdorf 50 PO Box 137 7300 AC APELDOORN The Netherlands	Intertek Academy Place, 1-9 Brook Street, Brentwood, Essex, CM14 5NQ, United Kingdom
{NB No.} 0063	{AB No.} 0359
{description of intervention}	
Type Examination to the Gas Appliance Regulation (EU) 2016/426	UKCA Type Examination to UK Gas Appliances Regulations
{details of certificate including Date; Period of validity; Conditions of validity}	
Certificate # 18GR0441/03 dated 27th May 2020 and valid to 27th May 2030	Certificate #UK-GZH -0359-000080 dated 18th March 2022
{name of manufacturer} Buffalo	
{address of manufacturer}	
Unit 9003 Blarney Business Park Blarney Co. Cork, Ireland	Fourth Way, Avonmouth, Bristol, BS11 8TB United Kingdom

31 st , Mar, 2022	
DocuSigned by:  D352874F7FAB460...	DocuSigned by:  B39382C9FD9C478...
Eoghan Donnellan	Ashley Hooper
Commercial Manager/Importer	Technical & Quality Manager



UK	+44 (0)845 146 2887
Eire	
NL	040 – 2628080
FR	01 60 34 28 80
BE-NL	0800-29129
BE-FR	0800-29229
DE	0800 – 1860806
IT	N/A
ES	901-100 133



<http://www.buffalo-appliances.com/> 

CF732_EN_A5_v2_2024/12/19